

PSA Prince2 MED17.4.2 project New Hardware Derivating from D6 delivery (FRM : 14-446.-983 / D6; 1) | 14-446.984 I12.1;1 | 2010-07-28

14-446.984 I12.1;1

8I121C

Functionsheet [FRM]

www.bosch.com



BOSCH

Invented for life

Table of Contents

I	14-446.984 I12.1;1 14-446.984	32
1	VEH VEH	32
1.1	VMD VMD	32
1.1.1	VMD_FG VMD_FG	32
1.1.1.1	BGWPFGR 4.60;1 Calculation variable, back-calculated pedal value for FGR	32
1.1.2	LLIM LLIM	35
1.1.2.1	BBSPL 1.90;2 Activation and deactivation conditions of the speed limiter	35
1.1.2.2	SPLAUS 2.10;1 exit to speed limiter	42
1.1.2.3	SPLMD 1.120;3 Function logic and control algorithm of vehicle-speed limiter	48
1.1.3	CRCTL CRCTL	62
1.1.3.1	BBFGR 14.51;0 Switch-on and switch-off conditions for vehicle-speed controller	62
1.1.3.2	FGRAUS 5.10;1 Cut-out by vehicle-speed controller	85
1.1.3.3	FGRMD 13.140;1 Function logic and control algorithm of vehicle-speed controller	88
1.1.4	ACCPED ACCPED	105
1.1.4.1	GGKD 1.160;0 Sensor variable for Kick-down	105
1.1.4.2	MDPED 12.60;1 Characteristic of Accelerator Pedal	121
1.1.5	APP APP	129
1.1.5.1	GGPED 36.80;1 Sensor variable for accelerator pedal	129
1.1.5.2	HT2KTPED 1.10;2 Device driver for accelerator pedal signals	161
1.1.5.3	MED2APP 1.10;1 Interface Adapter MED to Accelerator Pedal Position	161
1.1.6	BRK BRK	163
1.1.6.1	GGEGAS 43.30;0 Sensor variable for brake and clutch switches	163
1.2	COVEH COVEH	184
1.2.1	COME COME	184
1.2.1.1	MDVERB 23.221;0 Torque demand by auxiliary systems (e.g. air conditioner, misc. consumers)	184
1.3	PT PT	205
1.3.1	TRA TRA	205
1.3.1.1	DMEMKGS 2.30;0 Faulty Modes for Easymove torque, desired torque calculation	205
1.3.1.2	MDEM 2.30;1 Easymove clutch torque	256
1.3.1.3	MDLIMEM 1.40;0 Easymove clutch torque limitation	287
1.3.1.4	MDVEREM 1.40;1 Engine torque Loss : Easy-Move	290
1.3.2	CONV CONV	296
1.3.2.1	MDWAN 8.260;2 Torque of the AT-converter	296
1.3.3	STRT STRT	304
1.3.3.1	DSTAE 5.11;0 Diagnosis; powerstage starter control	304
1.3.4	CLTH CLTH	307
1.3.4.1	Clth_VD 10.20;0 Clutch Position Sensor Virtual Device	307
1.3.4.2	DKUPPL 10.50;0 Diagnosis of clutch switch	314
1.3.4.3	GGKUPPL 4.60;0 sensor variable for clutch pedal position	325
1.4	THS THS	334
1.4.1	SWAPMP SWAPMP	334
1.4.1.1	BBWAPU 2.30;3 Control condition of a switchable waterpump	334
1.4.1.2	BBZWP 2.61;0 Operating Condition Auxiliary Water Pump	359
1.4.1.3	DPTCE 3.11;0 powerstage-diagnosis of PTC (Positive Temperature Coefficient)	362
1.4.1.4	DZWPE 4.40;0 Powerstage diagnosis: Relais for additional water pump	372
1.4.1.5	HT2KTWAPU 1.20;1 Hardware configuration for BBWAPU pwm	375

1.4.2	CTM CTM	376
1.4.2.1	BBPTC 3.10;0 Control of PTC (Positive temperature coefficient)	376
1.4.2.2	KOS 210.32;0 Control of A/C compressor	383
1.4.3	ENGTM ENGTM	411
1.4.3.1	DKFTE 1.22;1 Power stage diagnosis, temperature map control	411
1.4.3.2	DTHM 15.61;0 diagnosis: thermostat monitoring	415
1.4.3.3	HT2KTKFT 1.20;1 driver for thermostat management	430
1.4.3.4	KFT 5.10;3 Electronically controlled thermostat	432
1.4.4	FANS FANS	447
1.4.4.1	AZLU 1.180;1 Additionnal ventilation	447
1.4.4.2	HT2KTMLS 2.70;1 Interface hardware driver to component driver for fan control	472
1.4.4.3	MLS 130.11;1 Electric cooling fan control	475
1.4.5	WaPmp WaPmp	503
1.4.5.1	DSTATMOTE 1.20;2 Diagnosis of wired output of engine state fonctionality with CY100	503
1.4.5.2	DWAPUE 1.60;1 Powerstage diagnosis of switchable water pump	507
1.4.6	FAN FAN	511
1.4.6.1	DAZLUE 1.30;0 Power stage diagnosis for additionnal ventilation	511
1.4.6.2	DLUES1E 8.20;2 Power stage diagnosis fan control 1	514
1.4.6.3	DLUES2E 13.10;0 Power stage diagnosis fan control 2	520
1.4.7	ACCLNTP ACCLNTP	524
1.4.7.1	GGDSAC 2.80;0 sensor signal pressure sensor AC-system	524
1.5	ELSS ELSS	530
1.5.1	ALT ALT	530
1.5.1.1	BGUGEN 2.40;1 Generator Voltage regulation (Name PSA : GAP)	530
1.5.1.2	DGEN 4.20;2 Diagnosis: BSD generator and formation of KL61	546
1.5.1.3	IMDGEN 6.30;0 Calculation of generator current and generator torque	551
1.5.1.4	LDSTGEN 3.40;0 Calculation of generator load condition	583
1.5.1.5	LOADRESP 2.30;0 Dynamic generator load response	587
1.5.1.6	STATGEN 1.30;2 Detection of alternator load states	593
1.5.1.7	UGENKOR 2.30;0 Generator - voltage boosting	599
1.5.2	ALTIO ALTIO	606
1.5.2.1	KTGEN 6.30;0 Component Driver - Alternator	606
1.6	GLBDA GLBDA	639
1.6.1	GLBDA_FG GLBDA_FG	639
1.6.1.1	GlbDa_LSum 10.10;1 Global Data Total Distance	639
1.6.2	VEHV VEHV	642
1.6.2.1	MED2Vehv 1.31;2 Interface Adapter MED to VehV	642
1.6.3	GlbDa_NC GlbDa_NC	644
1.6.3.1	MED2GlbDa 1.11;1 Interface Adapter MED to GlbDa	644
2	SD SD	645
2.1	SDE SDE	645
2.1.1	SDEED SDEED	645
2.1.1.1	STECK 35.20;0 Plug pin arrangement	645
2.1.2	SDECD SDECD	651
2.1.2.1	KONCW 660.50;0 Configuration via code words	651
2.1.3	SDEVAR SDEVAR	664
2.1.3.1	DVAR 11.10;2 Diagnostic variant coding	664
2.1.3.2	TELECO 582.40;0 Interface between Tester Services and EEPROM	666
2.1.3.3	VAR 582.100;1 Encoding of variants	668
2.1.4	SDEGD SDEGD	695

2.1.4.1	Customer_Bosch_Dictionary 1.10_112;0 Customer-Bosch Dictionary	695
2.2	SDL SDL	703
2.2.1	SDLAD SDLAD	703
2.2.1.1	ASCETBLK 1.10;1 Description of ASCET block library	703
2.2.1.2	ASCETSDBE 3.15;1 ASCET-SD description of ETAS-Systemlib blocks	705
2.2.1.3	ASCETSDBK 1.11;3 ASCET-SD automotive block library description	722
2.2.1.4	ASCETSDBP 3.13;2 ASCET-SD description primitiv operators	739
2.3	SD_NC SD_NC	745
2.3.1	SD_NC_FG SD_NC_FG	745
2.3.1.1	ProjConfDoc 29.80;0 Project/Software Configuration Documentation	745
3	CE CE	894
3.1	CES CES	894
3.1.1	CESDES CESDES	894
3.1.1.1	BBSTATMOT 10.10;4 Calculation of motor states	894
3.1.1.2	BBSTT 18.20;0 Condition Engine start	900
3.1.1.3	CoEng_stEng 2.20;3 Coordinator Engine - Engine States	905
3.1.2	CESIA CESIA	918
3.1.2.1	BBSAWA 62.30;1 Conditions for fuel cut-off / cut-in	918
3.1.3	CES_NC CES_NC	928
3.1.3.1	MED2StSys 1.20;3 Interface Adapter MED to Start System	928
3.2	CEM CEM	929
3.2.1	CEMMR CEMMR	929
3.2.1.1	BDEMEN 8.10;2 GDI mode control: Permissible operating modes	929
3.2.1.2	BDEMST 1.70;5 GDI mode control: engine start	941
3.2.1.3	BGBVG 6.20;2 Limits of combustion modes	947
3.2.1.4	LBUESYN 1.20;1 Calculation of running time readiness of bridging signals for all GDI-mode	954
3.2.1.5	NLKO 7.20;1 Coordination of permitted engine modes during emergency state	957
3.2.2	CEMMC CEMMC	960
3.2.2.1	BDEMKO 8.20;1 GDI mode control: Desired operating mode	960
3.2.3	CEMMS CEMMS	972
3.2.3.1	BDEMUM 5.30;1 GDI mode control: Coordination of switch-over	972
3.2.3.2	BDEMUS 4.20;2 GDI mode control: time of switch-over	985
3.2.4	CEM_NC CEM_NC	990
3.2.4.1	MED2CoEOM 1.20;0 Interface Adapter MED to Coordinator Engine Opera- tion Mode	990
4	ETS ETS	992
4.1	COETS COETS	992
4.1.1	COETS_FG COETS_FG	992
4.1.1.1	DMBEG 1.10;5 Diagnosis torque limitation level 1	992
4.1.1.2	MDKOG 120.30;2 Coordination torque intervention	995
4.1.1.3	MDKOL 36.30;1 Coordination torque intervention air path	1018
4.2	ENGDEM ENGDEM	1024
4.2.1	ENGPRT ENGPRT	1024
4.2.1.1	MDBGRG 17.192;3 torque limitation mimimum	1024
4.2.1.2	NMAXMD 68.41;0 Engine speed limitation	1052
4.2.1.3	NMAXS 6.50;1 Desired engine speed for NMAX control	1060
4.2.2	ENGREQ ENGREQ	1073
4.2.2.1	HPMD 3.20;6 calculation of a reserve torque for heat perfomance	1073
4.2.2.2	MDSTKUP 1.40;0 Torque reserve for vehicle take-off	1080

4.3	ASD ASD	1086
4.3.1	ASDRF ASDRF	1086
4.3.1.1	MDCRSCO 1.60;0 N-Cross-Coordination	1086
4.3.1.2	MDFAFI 30.20;3 Calculation and change limitation of torque demand by the driver	1097
4.3.2	ASDDC ASDDC	1126
4.3.2.1	DARAC 10.370;0 Continuous ignition angle correction function PSA	1126
4.3.3	ASD_NC ASD_NC	1150
4.3.3.1	MDFAFZ 6.30;0 PSA class for FGR and SPL (Called by MDFAFI)	1150
4.4	SPDGOV SPDGOV	1153
4.4.1	HLSDem HLSDem	1153
4.4.1.1	LLRMR 30.10;0 Torque reserve for idle speed control	1153
4.4.1.2	LLRNS 559.300;1 Idle control; Nominal engine speed for idle speed control	1160
4.4.2	LIGov LIGov	1183
4.4.2.1	LLRBB 505.123;0 Operating conditions of idle speed control	1183
4.4.2.2	LLRRM 505.180;0 Idle speed control: torque controller	1188
4.4.3	SPDGOV_NC SPDGOV_NC	1204
4.4.3.1	LAYTDDI 15.10;1 Intersection RB-World to BMW-World	1204
4.4.3.2	MDASG 22.50;4 torque demand automatted gearbox ASG	1208
4.4.3.3	MDASGL 1.150;2 MDASGL	1223
4.5	TRQCNV TRQCNV	1232
4.5.1	CNVLEAD CNVLEAD	1232
4.5.1.1	MDFUE 25.50;0 Nominal-value input from nominal torque for airmass	1232
4.5.1.2	MDRLMX 1.50;3 maximum desired air charge for nominal torque of charged engines	1237
4.5.2	CNVSET CNVSET	1239
4.5.2.1	LAYTSTCC 12.10;0 Intersection RB-World to BMW-World	1239
4.5.2.2	MDRED 37.151;1 Calculation reduction stage from torque demand	1240
4.5.2.3	MDZW 33.20;0 Calculation of torque in nominal ignition timing	1257
4.5.2.4	NCEXTCV 1.10;0 Interface module torque conversion - PLA	1260
4.5.2.5	SGSRED 1.80;1 Fuel cut-off condition for auto/piloted gearbox	1261
4.6	TRQMOD TRQMOD	1269
4.6.1	ACTMOD ACTMOD	1269
4.6.1.1	MDAUTG 13.90;1 Calculation of torque actual value for gear control	1269
4.6.1.2	MDIST 35.20;0 Engine torque calculation	1279
4.6.2	RNGMOD RNGMOD	1285
4.6.2.1	MDBAS 40.80;2 Basic calculation for torque interface	1285
4.6.2.2	MDBASOG 2.50;2 Basic calculation for torque interface without gear-box intervention	1291
4.6.2.3	MDMAX 2.30;2 Calculation maximum indicated torque	1298
4.6.2.4	MDMIN 10.40;1 Minimum engine torque coordination	1300
4.6.2.5	MDNSTAB 6.60;1 Torque: engine-speed stabilization	1304
4.6.2.6	MDVER 39.20;0 Loss in engine torque	1306
4.6.2.7	MDVERAD 22.20;2 Adaptation of torque loss	1313
4.6.3	PHYMOD PHYMOD	1323
4.6.3.1	BGETADZW 3.50;4 computation methods for spark efficiency	1323
4.6.3.2	BGTMOHDI 2.20;10 Computation of correction values for homogeneous multi injection (HOM, HSP, HKS)	1329
4.6.3.3	BGTMOLAM 2.20;1 Calculation of efficiency and ignition angle correction - Lambda	1332
4.6.3.4	NWFW 6.10;1 Calculation: factor camshaft angle	1338
4.6.3.5	ZWOPT 13.10;10 Calculation of the optimized model reference ignition angle	1342
4.6.4	TrqMod_NC TrqMod_NC	1348
4.6.4.1	NCEXTMO 1.60;1 Interface Module Torque Model - PLA	1348

5	AS AS	1350
5.1	ATC ATC	1350
5.1.1	ATCPD ATCPD	1350
5.1.1.1	BGMSDKS 6.70;2 Calculation of set air mass flow through throttling valve	1350
5.1.1.2	BGMSUGD 6.70;0 Calculated variable: mass flow unthrottled	1353
5.1.1.3	BGRLMIN 3.30;2 Calculation of minimum air flow r _{lmin}	1361
5.1.1.4	BGRLMXS 17.40;1 Calculation maximum, desired filling	1365
5.1.1.5	BGRLSOL 14.21;5 Calculation of desired air charge	1374
5.1.1.6	BGRLXZW 6.20;1 Calculation Factor reducing r _{lmsx_w} depending on the ignition efficiency	1383
5.1.1.7	FUEDK 61.60;1 Charge control (calculation of nominal throttle-valve angle)	1384
5.1.1.8	FUEDKSA 3.40;0 Influence of air charge by throttle blade, processing throttle-valve angle	1395
5.1.1.9	MSUDKSOM 1.10;4 Overcritical set value air charge without torque structure	1399
5.1.1.10	VPSKO 4.40;3 Co-ordination of the requests for reduction in the throttle valve position	1404
5.1.1.11	WDKSOM 4.20;3 calculation of desired throttle angle without torque structure	1408
5.1.2	ATCTDCP ATCTDCP	1411
5.1.2.1	ADVE 10.60;2 Activation of the DV-E by means of the DLR	1411
5.1.2.2	BGDVE 22.40;0 Values for DV-E control from the learning and checking routines	1443
5.1.2.3	BGWDKM 1.11;0 Calculation of throttle angle model	1515
5.1.2.4	DDVE 11.43;5 Diagnosis: ETS Actuator DV-E	1519
5.1.2.5	DVE2SV 1.30;0 Interface for OBD II Service Mode \$01+\$02	1553
5.1.2.6	DVEIR 1.11;2 DVEIR ratio determination to error path DK, DK1P, DK2P, DVEF	1556
5.1.2.7	GGDVE 10.70;1 Sensor variables for throttle-valve actuator	1559
5.1.2.8	HT2KTDVE 11.30;3 Interface hardware driver - component driver DVE	1571
5.1.2.9	HT2KTDVEJ 4.31;0 Component driver for CJ230 Spi Bus	1573
5.1.2.10	SREAKT 7.100;4 EGAS: safety concept, failure reactions	1576
5.1.3	ATCMFA ATCMFA	1581
5.1.3.1	BGFKMS 9.80;1 calculated value correction faktor air mass flow	1581
5.1.3.2	BGMSDK 10.100;1 Calculation: mass flow through throttle valve	1608
5.1.4	ATC_NC ATC_NC	1628
5.1.4.1	BGTVV 1.32;2 Temperature model before compressor - Prince Specific MED17.x	1628
5.2	ADC ADC	1644
5.2.1	ADCPMCP ADCPMCP	1644
5.2.1.1	DPLPSR 1.162;0 Diagnosis plausibilisation manifold pressure sensor	1644
5.2.1.2	GGDSS 7.100;0 Sensor value pressure sensor intake manifold pressure	1661
5.2.2	ADCPACP ADCPACP	1671
5.2.2.1	BGPU 10.92;1 Calculation value ambient pressure	1671
5.2.2.2	DPLPU 3.92;0 Diagnosis plausibilisation ambient pressure	1685
5.2.2.3	GGPU 1.50;3 Sensor variable function for atmospheric pressure	1695
5.2.3	ADPCUCP ADPCUCP	1699
5.2.3.1	BGPV 1.10;4 Calculated variable for pressure upstream of compressor	1699
5.2.4	ADCPTUCP ADCPTUCP	1700
5.2.4.1	BGPVD 1.50;1 Pressure before throttle valve output with value range till 5120hPa	1700
5.2.4.2	DPLPVD 2.52;0 Diagnosis plausibilisation pressure upstream throttle	1706
5.2.4.3	GGPVD 5.10;0 Sensor variable pressure upstream of throttle valve	1714
5.2.5	ADCPICUP ADCPICUP	1719
5.2.5.1	BGPVLLK 1.20;1 Calculated pressure upstream intercooler	1719
5.2.6	ADCMM ADCMM	1722
5.2.6.1	BGADAP 7.20;1 Alignment of measuring and modeling intake manifold pressure	1722
5.2.6.2	BGLWM 2.90;3 Calculation for charge exchange model	1737
5.2.6.3	BGRL2SV 1.30;2 Calculation r _l -Reference-Values to Service	1767

5.2.6.4	BGRLFGZS 8.30;0 Calculation of fresh air charge flowing into the intake manifold	1771
5.2.6.5	BGRLG 3.10;3 Calculated value RL-GRADIENT	1777
5.2.6.6	BGTMPK 4.60;0 Calculation of temperature compensation for intake manifold model	1779
5.2.6.7	SRMDK 1.120;1 intake manifold model throttle blade	1784
5.2.6.8	SRMDSS 3.20;1 intake manifold model with differential pressure sensor ..	1790
5.2.6.9	SRMHFM 8.30;0 intake manifold model with hot film mass meter	1793
5.2.6.10	SRMSEL 7.30;1 Selection of intake manifold modelling	1803
<hr/>		
5.2.7	ADCMFT ADCMFT	1812
5.2.7.1	BGDSAD 6.70;0 Caculate values for adjustment pressure sensors	1812
5.2.7.2	BGMSDSS 1.20;1 calculation of air mass flow from intake manifold pressure sensor (DS-S signal)	1824
5.2.7.3	BGMSHMDK 1.51;2 calculation of air mass at MAF sensor based on throttle blade or MAP sensor	1825
5.2.7.4	BGWDKHF 4.20;0 Calculation: throttle valve angle from signal of the main charge sensor	1837
5.2.7.5	DSELHFS 7.10;1 selection: diagnosis of main load sensor	1838
5.2.7.6	LAYASADC 12.50;1 Intersection RB-World to BMW-World	1841
<hr/>		
5.2.8	ADCPC ADCPC	1846
5.2.8.1	BGRLP 32.30;4 Calculation variable rlp: predicted air charge	1846
5.2.8.2	BGWPR 2.50;0 Calculated Value prediction angle	1855
<hr/>		
5.3	AVC AVC	1859
<hr/>		
5.3.1	AVCDP AVCDP	1859
5.3.1.1	BBNWS 11.71;0 Operating conditions to enable NWS	1859
5.3.1.2	BGARNW 4.50;1 calculated value: camshaft adaptation request	1879
5.3.1.3	BGNVNW 1.50;4 Calculation unlocked camshaft	1892
5.3.1.4	NWEVDA 1.10;3 camshaft reduced shifting range by diagnosis exhaust system	1921
5.3.1.5	NWEVO 2.41;1 camshaft control: restricted possibility to adjust camshaft by oil pressure	1922
5.3.1.6	NWSFAT 1.40;1 Camshaft control, target value setting via tester	1945
5.3.1.7	NWSOLLE 33.70;2 Assigned target value of intake camshaft control	1956
5.3.1.8	NWSVG 1.10;1 camshaft disired angle adjusting limit	1990
5.3.1.9	SSTNW 1.80;1 Calculation of setpoints for camshaftcontrol	1998
<hr/>		
5.3.2	AVCACP AVCACP	2004
5.3.2.1	BBDNWS 4.93;0 Readyness of diagnosis camshaft	2004
5.3.2.2	BGNWVFE 4.10;0 fine trigger of camshaft position of inlet camshaft(s) ..	2024
5.3.2.3	DNWIR 3.40;1 Diagnosis camshaft control, IUMPR-functionality	2028
5.3.2.4	DNWSEEIN 4.20;2 Diagnosis of camshaft output stage (intake camshaft) ..	2037
5.3.2.5	DNWSEIN 6.151;2 Diagnosis of camshaft control (intake camshaft)	2046
5.3.2.6	HT2KTNWS 12.20;2 Interface hardware driver - component driver	2087
5.3.2.7	WNWRE 16.20;1 Inlet camshaft controller	2095
<hr/>		
5.3.3	AVCPA AVCPA	2122
5.3.3.1	BGWGWV 1.70;4 Calculation angle of gas exchange valve	2122
5.3.3.2	DNWSZF 4.21;1 Diagnosis camshaft control summarize of failure	2138
5.3.3.3	LAYASAVC 27.10;0 Intersection RB-World to BMW-World	2150
5.3.3.4	NWWUE 8.20;5 Calculation of camshaft overlap	2151
<hr/>		
5.3.4	AVC_NC AVC_NC	2161
5.3.4.1	MED2AVC 1.31;1 Interface adapter MED to AVC	2161
<hr/>		
5.4	ABC ABC	2163
<hr/>		
5.4.1	ABCPD ABCPD	2163
5.4.1.1	BGPLGU 2.20;4 Calculation of Basic Boost Pressure for Charged Engines ..	2163
5.4.1.2	LDOB 36.30;0 Boost control overboost	2164
5.4.1.3	LDRPLS 12.60;1 Calculation of desired boost pressure	2169
5.4.1.4	SSTABC 1.10;1 Calculation Supporting points ABC-function	2176
<hr/>		
5.4.2	ABCPC ABCPC	2177
5.4.2.1	BBLDR 18.30;1 Controllor modes boost control	2177
5.4.2.2	BGHATLSTS 3.81;0 Calculation Desired lift of TC-Actuator	2182
5.4.2.3	DLDR 20.63;0 Diagnosis boost pressure control	2191

5.4.2.4	LDRSTKO 1.60;1 Boost Pressure Actuator Coordination	2204
5.4.2.5	PVDREG 4.41;1 Pressure upstream Throttle Controller	2206
5.4.3	ABCWGCP ABCWGCP	2216
5.4.3.1	ATVLDSTE 10.20;4 Output Duty Cycle Boost-Pressure Actuator of Output Stage	2216
5.4.3.2	BGHATLST 1.20;1 Calculation Current Position of Boost Pressure Actuator	2221
5.4.3.3	BGLDRSTG 2.40;2 Calculated Value Boost Pressure Set Value	2222
5.4.3.4	DLDE 12.10;5 Diagnosis of LDR power stage	2225
5.4.3.5	HT2KTWGV 2.30;0 Interface hardware driver - component driver solenoid valve wastegate	2231
5.4.4	ABCDVCP ABCDVCP	2232
5.4.4.1	DLDUVSE 4.10;3 Diagnosis power stage dump valve turbo	2232
5.4.4.2	DSUVR 1.23;0 Dump Valve diagnosis for systems with and without HFM ..	2234
5.4.4.3	HT2KTSUV 2.10;4 Interface hardware driver - component driver dump valve ..	2244
5.4.4.4	LDUVST 19.10;1 Actuation dump valve	2245
6	FS FS	2252
6.1	FFC FFC	2252
6.1.1	FFCAFRS FFCAFRS	2252
6.1.1.1	BGFAWU 3.10;5 Calculated value of driver command	2252
6.1.1.2	LAMKO 120.10;0 Lambda coordination	2254
6.1.1.3	LANSWL 1.40;1 Lambda during afterstart and warm-up	2271
6.1.2	FFCAFRC FFCAFRC	2276
6.1.2.1	ESGRU 23.50;1 Basic function injection	2276
6.1.2.2	ESNSWL 25.50;2 injection during afterstart and warm-up	2277
6.1.2.3	ESSTT 47.10;1 Injection duration at start	2288
6.1.2.4	ESUK 41.10;4 Injection: transient compensation	2297
6.1.2.5	ESWE 1.90;1 Injection, resumption of overrun fuel cut-off	2306
6.1.2.6	ESWEZ 3.20;3 restart fuel feed cylinder specific	2309
6.1.2.7	STADAP 26.30;1 Starting fuel adaptation	2323
6.1.3	FFCCRFM FFCCRFM	2368
6.1.3.1	BGKV 17.40;3 Calculation variable consumed fuel	2368
6.1.3.2	GK 120.10;0 Mixture control	2373
6.2	FIT FIT	2380
6.2.1	FITIT FITIT	2380
6.2.1.1	AWEA 29.30;1 output crank-angle for injection-control	2380
6.2.1.2	BGFPRIST 1.20;1 Calculation of the cylinder pressure correction factor ...	2397
6.2.1.3	EAKO 2.50;2 Injection-Mode-Coordinator	2402
6.2.1.4	ES AUSG 1.80;0 Output: injection times and angles to the drivers	2412
6.2.1.5	RKSPLIT 2.40;1 Splitting of relative fuel mass for multiple injection	2420
6.2.1.6	RKTI 37.30;0 Calculation of injection time ti from relative fuel mass rk ...	2425
6.2.1.7	SYNTIZW 3.30;3 BDE synchronization injection/ignition	2439
6.2.2	FITVS FITVS	2442
6.2.2.1	AEVAB 25.40;0 Output injection valve cut off	2442
6.2.2.2	AEVABZK 6.40;3 Output injection-valve cut-off %MDRED + total shutdown by monitoring functions	2451
6.2.2.3	BGBGHDEVO 1.10;1 calculation limitations for open HPIV	2452
6.2.2.4	BGEVAB 4.30;1 Calculation of the actual reduction stage by ignition-valve cut-off	2453
6.2.2.5	DHDEVO 1.30;1 diagnosis open HDEV	2456
6.2.2.6	KOEVAB 7.40;1 Coordination of injection valve cutoff	2467
6.2.3	FIT_NC FIT_NC	2475
6.2.3.1	MED2FIT 1.50;1 Interface adapter MED to FIT	2475
6.3	FMA FMA	2477
6.3.1	FMAMA FMAMA	2477
6.3.1.1	BBBO 4.10;2 Start operating range with fuel in oil	2477
6.3.1.2	BGFRBTS 1.21;2 calculated value: controller factor during component protection	2482

6.3.1.3	LRA 190.10;1 Lambda closed loop control; Adaptive pilot control.....	2489
6.3.1.4	LRAEB 31.20;1 Conditions adaptive pilot control	2512
6.3.2	FMADMS FMADMS	2538
6.3.2.1	BGEDKVS 3.12;1 Determination of error DKVS (adapter)	2538
6.3.2.2	DKVS 29.121;0 Diagnosis; plausibility test fuel supply system	2541
6.3.2.3	DKVSFK 1.20;0 Diagnostic of fuel system for driveability	2562
6.3.3	FMASC FMASC	2576
6.3.3.1	LRAPHU 2.60;5 Formation of physical urgency of mixture adaptation	2576
6.4	FSS FSS	2585
6.4.1	FSSHPP FSSHPP	2585
6.4.1.1	BBSTHDR 1.72;0 Operating conditions start with high fuel pressure	2585
6.4.1.2	DKVBDE 9.90;1 Diagnosis fuel supply system GDI	2592
6.4.1.3	DKVBDEPL 9.30;0 diagnosis plausibility check fuel supply system GDI	2605
6.4.1.4	DSTHDR 1.51;1 Diagnosis start with high fuel pressure	2610
6.4.1.5	HDRPSOL 15.50;0 fuel pressure nominal value (GDI)	2615
6.4.2	FSSHPSV FSSHPSV	2621
6.4.2.1	SV_ADHDR 1.170;0 Software Adapter regulation high pressure pump	2621
6.4.2.2	SV_APCV 1.20;0 High Pressure Pump Control (Appl. Inc) - Regulator Activation	2628
6.4.2.3	SV_AVCV 1.300;1 SV three way valve command	2635
6.4.2.4	SV_DVCVE 1.20;3 Power stage diagnosis for the volume control valve VCV (fuel pressure in rail)	2671
6.4.2.5	SV_GGDSKV 1.60;0 Sensor signal rail pressure sensor	2675
6.4.2.6	SV_HDRFC 1.140;0 SV High pressure pump Flow Control.....	2677
6.4.2.7	SV_HDRPC 1.90;0 SV High pressure pump Pressure Control	2690
6.4.2.8	SV_HT2KTVCV 1.20;2 Interface HardWare for Siemens three-way valve regulator	2704
6.4.2.9	SV_KOHR 1.180;0 Coordination of high-pressure regulation for Siemens SAH-Pump	2705
6.4.3	TFUELCP TFUELCP	2718
6.4.3.1	KTM 2.170;1 Fuel temperature model	2718
6.4.4	PFUELHPCP PFUELHPCP	2730
6.4.4.1	DDSKV 1.90;0 Diagnosis; high pressure sensor	2730
6.4.4.2	GGDSKV 2.71;0 Sensor signal rail pressure sensor.....	2733
6.4.4.3	HDRPIST 3.40;2 Rail pressure actual value	2736
6.4.5	FLPMLPCP FLPMLPCP	2741
6.4.5.1	AEKP 25.140;1 Output fuel pump control	2741
6.4.5.2	dekpe 24.23;1 Diagnosis; power stage of fuel pump relay	2751
6.4.6	FUELLSCP FUELLSCP	2756
6.4.6.1	DFSTT 21.10;1 Diagnostics for fluid level sensor tank	2756
6.4.6.2	DFSTDFP 10.10;0 Connection to DFPM for fuel level sensor diagnosis ...	2773
6.4.6.3	DTANKL 8.10;0 Diagnosis OBDII error due to an empty canister.....	2781
6.4.6.4	GGFSTT 30.10;1 Sensor variable fluid level sensor tank	2798
6.4.7	FSS_NC FSS_NC	2812
6.4.7.1	MED2FSS 1.31;0 Interface adapter MED to FSS	2812
6.5	FPC FPC	2813
6.5.1	FPCCPC FPCCPC	2813
6.5.1.1	FITXFPC 1.10;5 FIT-output variables for FPC	2813
6.5.1.2	TEADAP 2.20;1 Adaptation Mixture Deviation during Purge Control	2815
6.5.1.3	TEBGTEV 1.30;1 Calculation of actual mass flow	2820
6.5.1.4	TEEB 7.10;1 Operating conditions for canister purge valve	2826
6.5.1.5	TEKOMS 1.10;8 Coordinator of CPV	2840
6.5.1.6	TELAM 1.30;1 processing signals of closed lopp lambda control for purge control	2842
6.5.1.7	TEMSSOLS 3.10;3 Desired mass flow of purge control	2851
6.5.1.8	TERK 4.30;1 correction relative fuel-mass-flow because of purge flow	2854
6.5.1.9	TESIGOUT 1.60;3 output signals of purge control	2859
6.5.1.10	TESIGTE 2.10;4 Calculation of FPC-signals	2866

6.5.1.11	TESKSOL 1.80;1 Set value calculation for specific fuel rate of purge control	2869
6.5.2	FPCDCPV FPCDCPV	2877
6.5.2.1	COMDTES 3.60;1 Communication canister purge and leak detection	2877
6.5.2.2	DTEV 50.20;1 Diagnosis; canister purge valve (OBDII)	2897
6.5.2.3	DTEVEB 5.50;0 Switch-on conditions diagnostic purge control	2933
6.5.2.4	DTEVPAS 2.20;0 Passive check of canister purge valve	2954
6.5.3	FPCCPVCP FPCCPVCP	2962
6.5.3.1	DTEVE 15.20;0 Diagnosis; power stage of canister purge valve	2962
6.5.3.2	HT2KTTEV 4.10;2 Interface hardware driver - component driver output canister purge valve	2966
6.5.3.3	TEATEV 1.20;6 Calculation duty cycle and period for controlling of canister purge valve	2967
7	IS IS	2973
7.1	IGC IGC	2973
7.1.1	IGCFS IGCFS	2973
7.1.1.1	ZWBAS 9.90;0 calculation ignition angles for zwbasar	2973
7.1.1.2	ZWGRU 86.30;1 Basic ignition angle	2978
7.1.1.3	ZWHBDEB2 1.10;2 Correction of basic ignition angle for 2nd intake manifold & homogen. GDI-modes	2985
7.1.1.4	ZWKS 2.40;2 Ignition timing knock protection	2987
7.1.1.5	ZWLOWOCT 5.40;0 Correction of basic ign. angle for permanent knocking due to low-octane fuel	2989
7.1.1.6	ZWMIN 27.80;0 Calculation of maximum retarded spark limitation	2994
7.1.1.7	ZWOUT 7.30;2 Ignition angle calculation	3003
7.1.1.8	ZWSTT 5.90;1 Igniton at start	3005
7.1.1.9	ZWWL 9.10;0 Ignition during warm-up	3008
7.1.1.10	ZWZYL2SV 1.10;5 supply of zwzyl1 (ignition angle of cylinder 1) for tester interface	3010
7.1.2	IGCCP IGCCP	3011
7.1.2.1	DZBDU 3.22;1 Diagnostic ignitio via spark time measurements	3011
7.1.2.2	KTDZBDU 3.21;0 component driver diagnostic of ignition via measurement of spark timing	3030
7.1.2.3	ZUESZ 22.10;2 Ignition, calculation of coil closing time	3033
7.2	IKC IKC	3044
7.2.1	IKCFS IKCFS	3044
7.2.1.1	BBKR 26.80;1 operation conditions knock control	3044
7.2.1.2	IKCDST 1.10;1 Base point distribution for knock control	3059
7.2.1.3	KRADAP 5.21;1 Knock control: stationary adaptation	3060
7.2.1.4	KRDY 56.50;0 Knock control for load dynamics	3064
7.2.1.5	KRREG 13.30;0 Knock control: stationary control	3070
7.2.2	IKCCP IKCCP	3079
7.2.2.1	DKRS 35.42;0 Diagnosis; knock sensor	3079
7.2.2.2	DKRSA 1.11;1 diagnosis knock detection signal evaluation	3091
7.2.2.3	GGKR 19.10;1 Sensor variable knock control	3095
7.2.2.4	GGKRZMF 1.50;1 Sensor signal knock control additional measurement window	3103
7.2.2.5	KRKE 39.100;1 Knocking detection	3108
7.2.2.6	KRKES 1.20;0 Superknock recognition	3121
7.2.2.7	SKRKO 1.150;0 Super Knock Reactions Coordination	3127
8	ES ES	3142
8.1	EDM EDM	3142
8.1.1	EDMFG EDMFG	3142
8.1.1.1	ATM 74.10;3 Exhaust temperature model	3142
8.1.1.2	BGLAMABM 10.21;0 Modelling of lambda in the exhaust gas system	3187
8.1.1.3	BGMSABG 7.60;0 Calculation of exhaust emission mass flow - bank-dependent	3212
8.1.1.4	BGOSC 1.90;0 Modelling of oxygen storage capacity	3230
8.1.1.5	BGPABG 7.100;2 Calculation of exhaust gas pressure	3258
8.1.1.6	BGTPABG 15.10;1 Calculated value of dew point in exhaust system branch	3274

8.1.1.7	DCFFLR 1.130;2 Output situation Oxygen sensor control for mode\$01, mode\$02, Carb Freeze Frame	3299
8.1.1.8	DLSSA 30.21;2 Signal output from lambda sensors	3309
8.1.1.9	DLSSACAN 10.21;2 signal output (CAN) of lambda sensor	3391
8.1.1.10	DLSSACANSV 10.12;1 signal output (can) oxygen sensor mode\$06	3421
8.1.1.11	EASTKO 2.10;2 Coordination of Exhaust Gas Temperature Sensor Failure ..	3474
8.1.1.12	ESPLANT 2.20;2 Plant parameters of air/fuel control	3476
8.1.1.13	LOCOS2SV 1.10;4 Interface Oxygen Sensors Location for OBD2 Service \$01/\$02	3482
8.1.1.14	SERVEDM 1.20;2 service function for mainfunction EDM	3487
8.1.1.15	TEMPKON 25.10;0 Temperature converting module	3493
<hr/>		
8.1.2	EDMCP EDMCP	3495
8.1.2.1	BGTTURB 1.30;1 PRINCE - MED17 - Turbo temperature model for cooling Pump	3495
<hr/>		
8.2	EAF EAF	3497
<hr/>		
8.2.1	EAFCF EAFCF	3497
8.2.1.1	BGLASO 9.30;1 Calculation of desired lambda for lambda sensor	3497
8.2.1.2	LASO2SV 3.20;1 Interface of Commanded Equivalence Ratio to OBD Service	3512
8.2.1.3	LR 161.11;1 Lambda closed loop control	3515
8.2.1.4	LR2SV 9.40;1 Interface for OBDII Service	3554
8.2.1.5	LREB 153.60;1 Activation conditions for lambda closed loop control	3571
<hr/>		
8.2.2	EAFDF EAFDF	3579
8.2.2.1	DLATPFK 1.10;2 Lambda sensor aging monitor under running smoothness aspects	3579
8.2.2.2	DLSA 62.53;0 Lambda sensor aging monitoring	3582
<hr/>		
8.2.3	EAFCP EAFCP	3623
8.2.3.1	DHLSVK 12.32;0 Diagnosis sensor heating upstream catalyst	3623
8.2.3.2	DHLSVKE 10.10;1 Diagnosis power stage sensor heating upstream catalyst ..	3638
8.2.3.3	DLSV 46.30;0 Diagnosis; Readiness for operation of sensor upstream catalyst	3643
8.2.3.4	GGLSV 9.20;0 Sensorsignal lambda upstream catalyst	3672
8.2.3.5	HLSVK 7.20;1 Heating for lambda sensor upstream of the catalyst	3690
<hr/>		
8.3	ETM ETM	3701
<hr/>		
8.3.1	ETMCF ETMCF	3701
8.3.1.1	LRHKC 12.21;1 lambda control downstream main catalyst, continuous version	3701
8.3.1.2	LRHKEB 11.30;3 Switch on condition	3721
8.3.1.3	LRKA 42.10;3 Catalyst purge	3738
<hr/>		
8.3.2	ETMDF ETMDF	3783
8.3.2.1	DDYLSH 4.60;0 Dynamic diagnosis downstream mean cat	3783
8.3.2.2	DHKIR 3.10;2 IUMPR for Main Catalyst Monitor	3862
8.3.2.3	DKAT 84.10;0 Diagnosis; catalyst conversion	3864
8.3.2.4	DKATEB 5.11;0 Enable conditions main catalyst monitor	3884
8.3.2.5	DKATSERV 4.10;0 Catalyst Monitoring, service routine	3906
<hr/>		
8.3.3	ETMCP ETMCP	3916
8.3.3.1	DHLSHK 14.31;1 Diagnosis: sensor heating downstream of catalytic converter	3916
8.3.3.2	DHLSHKE 13.20;0 Diagnosis power stage sensor heating downstream catalyst	3933
8.3.3.3	DLSAHK 29.40;0 Ageing monitoring for lambda sensor downstream of catalytic converter	3938
8.3.3.4	DLSH 45.20;1 Diagnosis; Readiness for operation of sensor downstream catalyst	3986
8.3.3.5	GGLSH 17.20;0 Sensor variable for lambda sensor downstream of catalytic converter	4015
8.3.3.6	GGLSVFH 2.10;0 Sensorsignal lambda upstream/downstream/behind upstream catalyst	4039
8.3.3.7	HLSHK 10.20;0 Sensor heating downstream of catalytic converter	4049
8.3.3.8	KTGGLSVFH 3.30;0 Component Driver determination of oxygen sensor voltage	4061
8.3.3.9	LSHK2SV 4.11;0 Interface for Scan Tool Mode \$01 Voltage Lambda sensor (4.88mV/LSB) behind Kat	4070

8.4	ECT ECT	4080
8.4.1	ECTCF ECTCF	4080
8.4.1.1	BAKH 3.60;1 Coordination of requested injection mode for catalyst heating GDI	4080
8.4.1.2	BBKH 8.20;1 Running conditions of catalyst heating; GDI engines	4091
8.4.1.3	BBKW 1.50;2 running conditions catalyst warming GDI	4101
8.4.1.4	BGNLLKH 4.20;0 Calculation of increased idle speed for catalytic heating (GDI+PFI)	4104
8.4.1.5	KODOH 1.50;1 Coordination Double Injection For Heating GDI	4110
8.4.1.6	KOMRH 5.40;1 Coordination torque reserve for catalyst heating, GDI	4128
8.4.1.7	LAKH 10.80;2 Lambda coordination for catalyst heating	4143
8.4.2	ECTCPR ECTCPR	4151
8.4.2.1	ATR 13.20;1 exhaust temperature control	4151
8.4.2.2	BTKAT 1.10;2 catalyst operating temperature	4157
8.4.2.3	CPROXY 2.40;0 Component protection due to oxigen in exhaust gas	4159
8.4.2.4	LAMBT5 56.11;1 Lambda component protection	4172
9	OD OD	4193
9.1	OEP OEP	4193
9.1.1	OEP_NC OEP_NC	4193
9.1.1.1	BBABW 15.10;0 Detection of engine stalling	4193
9.1.1.2	LAYODOEP 13.20;0 Intersection RB-World to BMW-World	4194
9.2	OTM OTM	4197
9.2.1	OTM_FG OTM_FG	4197
9.2.1.1	TFGG2SV 1.20;4 Interface Temperature Sensors to OBD Service	4197
9.2.2	OTMTCWCP OTMTCWCP	4202
9.2.2.1	GGTFM 114.10;2 Evaluation of signal engine temperature sensor	4202
9.2.2.2	MED2OTMTCWCP 1.21;0 Interface adapter of MF OTM / FG OTMTCWCP	4250
9.2.3	OTMTACP OTMTACP	4251
9.2.3.1	BGTUMG 7.150;2 Calculated variable ambient temperature	4251
9.2.3.2	MED2EnvT 1.13;1 Interface Adapter MED to EnvT	4271
9.2.4	OTMTAMCP OTMTAMCP	4272
9.2.4.1	CEFTFA 2.10;0 Calculation of electrical error flag for TFA-sensors	4272
9.2.4.2	GGTFAM 10.20;2 Signal intake air temperature sensor for several mounting places to configure	4274
9.2.5	OTMTOSPCP OTMTOSPCP	4307
9.2.5.1	BGTOL 14.120;2 Calculated value: engine oil temperature	4307
9.2.6	OTM_NC OTM_NC	4321
9.2.6.1	GGTSG 5.30;1 Sensor variable and documentation of temperature control unit	4321
9.2.6.2	LAYODOTM 15.10;0 Intersection RB-World to BMW-World	4323
9.3	OBV OBV	4330
9.3.1	OBVCP OBVCP	4330
9.3.1.1	BGBN 1.10;4 Calculated value: vehicle electric system	4330
9.3.1.2	GGUBHR 3.10;0 sensor value of batteryvoltage after main relais, incl. diagnosis	4331
9.3.1.3	MED2BattU 1.24;1 Interface Adapter MED to BattU	4342
9.4	OMI OMI	4345
9.4.1	OMIMST OMIMST	4345
9.4.1.1	DMDDL 15.20;1 Diagnostic routine Misfire Detection, forming the diff. for irregular running	4345
9.4.1.2	DMDLAD 9.20;1 Logic and Delay; Logical operation,different blocks for misfire detection	4351
9.4.1.3	DMDLFB 8.40;0 Diagnosis: misfiring detection and calc. irregularity luts and filtered fluts	4354
9.4.1.4	DMDLFK 6.30;1 Diagnosis Misfire Detection Correction of engine roughness luts and fluts	4367

9.4.1.5	DMDLU 21.60;1 Diagnostic routine misfire detection: Irregular running ...	4369
9.4.1.6	DMDLUA 18.50;0 Diagnostic Misfire Detection distance method	4381
9.4.1.7	DMDMIL 20.110;3 Fault treatment of misfire detection, control on MIL and rectification	4387
9.4.1.8	DMDSTP 31.231;0 Diagnostic of misfire detection : Stop conditions	4451
9.4.1.9	DMDSV 1.90;0 Diagnosis Misfire Detection Service	4481
9.4.1.10	DMDUE 24.10;2 Diagnostic routine misfire detection Overview	4493
9.4.1.11	DMDZAG 5.31;1 Diagnostic misfire detection: misfire generator	4495
9.4.1.12	SSTDMD 5.20;0 Diagnostic misfire detection: distribution groups	4504
<hr/>		
9.4.2	OMIAST OMIASST	4507
9.4.2.1	DMDFOF 11.30;1 Diagnosis: detection of misfiring for fuel-off adaptation .	4507
9.4.2.2	DMDFON 15.50;1 Diagnosis Misfire Detection fuel-on Adaptation	4517
9.4.2.3	DMDTSB 16.30;5 Diagnosis misfire detection by segment time formation .	4549
<hr/>		
9.4.3	OMI_NC OMI_NC	4552
9.4.3.1	BGRBS 14.22;1 Calculated wheel acceleration from wheel speed	4552
9.4.3.2	DMDDEM 1.20;1 Fault treatment of misfire detection for Easy-Move	4558
9.4.3.3	DMDZWGRU 1.10;0 Fast misfire detection for knock prevention	4561
9.4.3.4	DSWEC 11.11;1 Bumpy road detection from wheel acceleration, -> via serial data link ABS	4564
<hr/>		
9.5	OVS OVS	4567
<hr/>		
9.5.1	OVSFG OVSFG	4567
9.5.1.1	BBGANG 60.30;0 Detection of actual gear	4567
9.5.1.2	GGVFZG 33.100;1 Input signal: vehicle speed	4605
9.5.1.3	LAYDTDS 12.20;0 Intersection RB-World to BMW-World	4613
9.5.1.4	VFZG2SV 1.20;5 Interface VFZG for OBD service	4616
<hr/>		
9.6	OST OST	4617
<hr/>		
9.6.1	OSTDET OSTDET	4617
9.6.1.1	BGTABSA 20.13;0 Adapter for soak time determination	4617
9.6.1.2	BGTABST 13.130;1 Calculated variable: cut-off time	4624
<hr/>		
9.7	OOI OOI	4639
<hr/>		
9.7.1	OOIPOECTI OOIPOECTI	4639
9.7.1.1	BGPOEL 3.150;1 Calculation oil pressure control	4639
<hr/>		
9.7.2	OOIPOECP OOIPOECP	4704
9.7.2.1	GGPOEL 14.50;0 Sensor signal oil pressure sensor, incl. diagnosis	4704
<hr/>		
9.7.3	OOIQOECF OOIQOECF	4709
9.7.3.1	GGOCS 5.61;1 Sensor signal Oil-condition sensor	4709
<hr/>		
9.7.4	OOILOECP OOILOECP	4718
9.7.4.1	HT2KTOCS 4.20;0 Transfer function from hardware driver to component oil condition	4718
<hr/>		
9.7.5	OilPmp OilPmp	4719
9.7.5.1	DPOELE 1.10;4 Powerstage Diagnosis OilPump	4719
<hr/>		
9.7.6	OOI_NC OOI_NC	4722
9.7.6.1	HT2KTOELP 1.30;0 Interface hardware driver to component driver for oil pump control	4722
9.7.6.2	LAYODOOI 15.20;1 Intersection RB-World to BMW-World	4723
<hr/>		
9.8	DEVLIB DEVLIB	4725
<hr/>		
9.8.1	ACTRLIB ACTRLIB	4725
9.8.1.1	DECJ 41.50;2 standard powerstage diagnosis enabling	4725
9.8.1.2	DPS_TMP 2.10;0 standard powerstage diagnosis	4726
<hr/>		
10 SC SC		4728
<hr/>		
10.1	SYC SYC	4728
<hr/>		
10.1.1	SYCOS SYCOS	4728
10.1.1.1	BBPARTWUP 1.30;2 Manages the RCD partial wake-up demand	4728

10.1.1.2	BBSYSCON 7.90;2 Operating conditon system state control	4730
10.1.1.3	SyC_CalWakeup 10.10;0 System Control for CalWakeup	4747
10.1.1.4	SyC_Deadline 10.20;1 Task deadline check	4748
10.1.1.5	SyC_Main 10.20;1 System-/ECU-state	4749
10.1.1.6	SyC_PostDrv 10.20;1 Control of PostDrive	4752
10.1.1.7	SyC_PreDrv 10.20;1 Control of PreDrive	4755
10.1.1.8	SYC_PROPOSTDRV 5.10;0 PostDrive Prolongation Control	4759
10.1.1.9	SyC_Shutdown 10.20;1 Control of Shutdown	4760
10.1.1.10	SyC_StopCnt 10.20;1 calculation of ECU off time	4760
10.1.1.11	SyC_UnderVltg 10.10;0 handling of 5V-undervoltage	4765
10.1.1.12	SyC2ME 1.60;0 Interface Adapter System Control to ME	4766
10.1.1.13	SYSCON 16.60;0 System state control	4768
10.1.2	MRLYCP MRLYCP	4774
10.1.2.1	MRly_DD 20.20;3 Main Relais device driver	4774
10.1.2.2	MRly_VD 20.20;2 Main Relay Virtual Device	4782
10.1.2.3	MRly2MED 20.20;0 Interface Adapter MRly to MED	4797
10.1.3	T15CP T15CP	4798
10.1.3.1	T15 2.40;1 Terminal 15 Device Encapsulation	4798
10.2	SC_NC SC_NC	4799
10.2.1	SC_NC_FG SC_NC_FG	4799
10.2.1.1	LAYSCSYC 12.60;0 Intersection RB-World to BMW World	4799
11	MO MO	4805
11.1	MOX MOX	4805
11.1.1	MOXFG MOXFG	4805
11.1.1.1	OCWDA 3.10;0 Operation condition of WDA/ABE shut off	4805
11.1.2	MOXAF MOXAF	4822
11.1.2.1	ADAPUF 5.10;0 ETC monitoring concept: Adapter for function monitoring air and fuel	4822
11.1.3	MOXTQ MOXTQ	4828
11.1.3.1	MDZUL 26.10;1 ETC monitoring concept: Calculation of maximum permit- ted set torque	4828
11.1.4	MOXFH MOXFH	4842
11.1.4.1	AEVABU 4.30;0 ETC monitoring concept: Output injection-valve cut-off ...	4842
11.1.4.2	MoXSynclOs 1.30;0 ETC monitoring concept: Detection loss of synchroni- zation	4845
11.2	MOF MOF	4847
11.2.1	MOFAP MOFAP	4847
11.2.1.1	UFSPSC 72.40;0 ETC monitoring concept: Monitoring of accelerator pedal value for function m.	4847
11.2.2	MOFEXT MOFEXT	4856
11.2.2.1	UFACCC 60.10;3 ETC monitoring concept: ACC input information moni- toring for function monitoring	4856
11.2.2.2	UFFGRC 30.10;1 ETC monitoring concept: Monitoring of Cruise Control of function monitoring	4860
11.2.2.3	UFFGRE 86.30;3 ETC monitoring concept: CC input information used in function monitoring	4864
11.2.2.4	UFMSRC 73.30;6 ETC monitoring concept: MSR intervention monitoring for function monitoring	4880
11.2.2.5	UFSGSC 78.40;4 ETC monitoring concept: SGS intervention monitoring for function monitoring	4891
11.2.3	MOFAF MOFAF	4914
11.2.3.1	UFGKC 5.30;1 ETC monitoring concept: check of mixture control in function monitoring	4914
11.2.3.2	UFMODC 10.10;4 ETC monitoring concept: Mode and required lambda in function monitoring	4927
11.2.3.3	UFRKC 30.10;3 ETC monitoring concept: required/actual lambda-check in function monitoring	4941
11.2.3.4	UFRKTI 21.30;1 ETC monitoring concept: check of fuel mass in function monitoring	4944

11.2.4	MOFTQ MOFTQ	4958
11.2.4.1	UFMIST 31.10;3 ETC monitoring concept: Actual torque	4958
11.2.4.2	UFMVER 30.10;2 ETC monitoring concept: Torque monitoring of function monitoring	4967
11.2.4.3	UFMZP 30.10;3 ETC monitoring concept: Torque filter for function monitoring	4972
11.2.4.4	UFMZUL 33.10;1 ETC monitoring concept: Calculation of permissible torque in function monitoring	4978
11.2.4.5	UFNC 5.30;0 ETC monitoring concept: Monitoring of engine speed for function monitoring	4989
11.2.4.6	UFNSC 30.10;2 ETC monitoring concept: Afterstart monitoring for function monitoring	4998
11.2.4.7	UFVARC 11.10;1 ETC monitoring concept: monitoring of variant criterion	5005
11.2.4.8	UFZWC 30.10;1 ETC monitoring concept: Monitoring of ignition angle for function monitoring	5010
11.2.5	MOFFH MOFFH	5016
11.2.5.1	DUF 12.50;0 Diagnostic interface of the function monitoring	5016
11.2.5.2	UFEING 30.20;0 ETC monitoring concept: Input signal transfer used in function monitoring	5043
11.2.5.3	UFREAC 30.20;1 ETC monitoring concept: Monitoring of fault reaction of function monitoring	5050
11.3	MOC MOC	5060
11.3.1	MOCFC MOCFC	5060
11.3.1.1	MoCADC 7.10;0 ETC monitoring concept: test of the AD- converter	5060
11.3.1.2	moccpu 1.10;2 ETC monitoring concept: instruction test	5070
11.3.1.3	mocgpta 1.10;1 ETC monitoring concept: monitoring of the GPTA (General Purpose Timer Array)	5072
11.3.1.4	MoCMem 1.40;1 ETC monitoring concept: cyclic memory test	5072
11.3.1.5	mocpcp 1.20;0 ETC monitoring concept: monitoring of the PCP (Peripheral Control Processor)	5077
11.3.1.6	mocpcf 1.10;1 ETC monitoring concept: program flow check	5080
11.3.1.7	MOCRAM 1.30;0 ETC monitoring concept: RAM-test	5081
11.3.1.8	MOCROM 1.30;0 ETC monitoring concept: ROM-test	5084
11.3.2	MOCMM MOCMM	5087
11.3.2.1	MoCCom 3.40;1 ETC monitoring concept: inquiry/response communication between UM/FR	5087
11.3.2.2	MOCSOP 5.20;0 ETC monitoring concept: shut-down path test	5095
11.4	MO_NC MO_NC	5102
11.4.1	MO_NC_FG MO_NC_FG	5102
11.4.1.1	VARUW 5.30;0 VARUW	5102
12	SIA SIA	5103
12.1	SIA_MF SIA_MF	5103
12.1.1	SIABas SIABas	5103
12.1.1.1	SIA_COMIFC 97.10;0 Immobiliser communication	5103
12.1.1.2	SIA_CORE 97.10;0 Immobiliser system	5103
12.1.1.3	SIA_EMSIFC 97.10;1 Immobiliser Interface	5104
13	ESC ESC	5106
13.1	ESC_MF ESC_MF	5106
13.1.1	ESC_MF_FG ESC_MF_FG	5106
13.1.1.1	ESC_Stack 1.80;0 ESC80.1	5106
13.1.1.2	ESC_TaskLink 1.80;0 activation of engine speed synchronous tasks	5108
14	CDRV CDRV	5112
14.1	EPM EPM	5112
14.1.1	EPM_FG EPM_FG	5112
14.1.1.1	Epm_Ini 1.100;2 Initialisation of EPM	5112
14.1.1.2	Epm_OpMode 1.140;2 Operation Modes of EPM	5115
14.1.1.3	Epm_Spd 1.142;1 Calculation of Engine Speed	5130

14.1.1.4	Epm_SpdGrd 1.70;1 Calculation of enginespeed gradient	5136
14.1.1.5	Epm_SwAdp 1.171;0 Adapter for EPM (MEDC17 to MED7/9)	5140
14.1.2	EPMSYN EPMSYN	5162
14.1.2.1	EpmSyn_CaSPos 1.110;1 phasesynchronisation about camshaft	5162
14.1.2.2	EpmSyn_CrSPos 1.100;1 synchronisation of crankshaftposition	5173
14.1.3	EPMHWE_FG EPMHWE_FG	5178
14.1.3.1	EpmHwe_Ini 1.80;0 Hardware encapsulation init	5178
14.1.3.2	EpmHwe_Srv 1.70;0 Service Library	5178
14.1.4	EPMCRS EPMCRS	5179
14.1.4.1	EpmCrS_Diag 1.110;0 Diagnosis of crankhaft signal	5179
14.1.4.2	EpmCrS_Plous 1.80;1 dynamic plausibility of crankshaft-signal	5191
14.1.4.3	EpmCrS_RevCnt 1.60;0 calculation of the crankshaft-revolutioncounter ...	5199
14.1.4.4	EpmCrS_Seg 1.101;0 calculation of crankshaft-segmenttimes	5200
14.1.5	EPMCAS EPMCAS	5206
14.1.5.1	EpmCaS_Adap 1.142;0 adaption of the camshaft-edges	5206
14.1.5.2	EpmCaS_Diag 2.10;2 Diagnosis Camshaft Signal	5218
14.1.5.3	EpmCaS_Meas 1.30;1 Epm Camshaft Measurement	5224
14.1.5.4	EpmCaS_OfsDiag 1.130;1 offset diagnosis	5227
14.1.5.5	EpmCaS_Seg 1.160;1 Calculation of CaS segment time and angle difference to reference position	5237
14.1.6	EPMBCR EPMBCR	5247
14.1.6.1	EpmBCr_IntrCo 1.70;0 Backup crankshaft interrupt coordination	5247
14.1.6.2	EpmBCr_Plous 1.70;0 Backup Crankshaft: Plausibilisation of camshaft si- gnal pattern	5252
14.1.6.3	EpmBCr_Pos 1.90;0 Backup Crankshaft: Engine Position	5258
14.1.7	EPMBCA EPMBCA	5261
14.1.7.1	EpmBCa_TstInj 1.60;1 Backup Camshaft	5261
14.1.8	EPMSEQ EPMSEQ	5268
14.1.8.1	EpmSeq_StateMn 1.110;2 statemachine of interrupt control	5268
14.1.9	EPMSRV EPMSRV	5277
14.1.9.1	EpmSrv_Lib 1.90;0 service library for EPM	5277
14.1.10	EPMHCAS EPMHCAS	5279
14.1.10.1	EpmHCaS_SigBuf 1.60;0 signal buffer of camshaft	5279
14.1.10.2	EpmHCaS_SigEval 1.90;3 Camshaft Signal Evaluation	5281
14.1.11	EPMHCRS EPMHCRS	5284
14.1.11.1	EpmHCrS_SigBuf 1.90;0 signalbuffer crankshaft	5284
14.1.11.2	EpmHCrS_SigEval 1.152;0 signal evaluation of crankshaft	5287
14.1.12	EPMHINT EPMHINT	5295
14.1.12.1	EpmHint_IntGen 1.100;1 interruptgenerator for EPM	5295
14.1.13	EPMRRS EPMRRS	5299
14.1.13.1	EpmRRS_AgDetect 1.110;1 Engine Position Management Reverse Rotation and Stop Angle Detection	5299
14.2	INJVLV INJVLV	5313
14.2.1	INJVLVCTL INJVLVCTL	5313
14.2.1.1	INJDDGDI 2.60;0 Device Driver GDI, electromagnetic injector	5313
14.2.2	INJVLVPS INJVLVPS	5318
14.2.2.1	INJVLVPS_CONCJ 3.11;0 Configuration of Output Stage Electromagnetic Injector (HDEV)	5318
14.2.2.2	INJVLVPS_DIA 3.11;0 Diagnosis of Output Stage Electromagnetic Injector (HDEV)	5338
14.2.2.3	INJVLVPS_DIAADC 3.10;1 Diagnosis of Separate 12V Supply Voltage of Output Stage Electromagnetic Injecto	5378
14.3	IGNCL IGNCL	5380
14.3.1	IGNCLCTL IGNCLCTL	5380
14.3.1.1	IGNDD 2.120;1 componentdriver Mx17-ignition	5380

14.4	KNDET KNDET	5392
14.4.1	KNDETCTL KNDETCTL	5392
14.4.1.1	KNDETCONTROL 2.20;1 MED17 Complex Driver KnDet	5392
14.4.1.2	KnDetLTest 1.40;2 knock sensor line diagnosis (short circuit detection)	5402
14.4.1.3	KNDETSIGVAL 2.21;0 MED17 Complex Driver KnDet	5414
15	CO CO	5418
15.1	COU COU	5418
15.1.1	COU COU	5418
15.1.1.1	BGRDLI 4.54;2 dynamics frames	5418
15.1.1.2	CAN_EIF 3.10;0 CAN Electronic Integration's Frame	5472
15.1.1.3	STGDIA 4.50;2 Available Actuators in projects	5476
15.2	COV COV	5486
15.2.1	COVFG COVFG	5486
15.2.1.1	BGCANECU 10.53;0 Calculation of sent-by-the-CMM messages	5486
15.2.1.2	BGCANEM 1.71;0 Calculation of easymove gas pedal angle on CAN	5543
15.2.1.3	BGCRC3 3.20;1 Message processing for brake signals from CAN	5553
15.2.1.4	BGCREGS 7.40;2 CAN for Prince PSA-use of information coming from gearbox CPU	5566
15.2.1.5	BGCRINS 4.10;1 Messages coming from passenger-cell (BSI)	5595
15.2.1.6	CANECU 30.75;2 Sent messages and signal definition	5614
15.2.1.7	CANSGS 15.31;0 Interface function for transmission torque requests via CAN	5618
15.2.1.8	GGCSTA 10.20;2 Messages management for automatic start	5651
15.2.1.9	LAYCOCOV 16.11;0 Intersection RB-World to BMW-World	5652
15.2.1.10	LAYCOVGS 2.50;0 Intersection RB World to GSI	5665
15.3	COMCIL COMCIL	5671
15.3.1	COMCIL_FG COMCIL_FG	5671
15.3.1.1	CDD_CAN 2.20;0 Centralized Defects Diary : CAN functions	5671
15.3.1.2	CDD_CORE 2.20;3 Centralized Defects Diary : core functions	5671
15.3.1.3	CDD_DM 2.20;0 Centralized Defects Diary : interface to the defects memory	5676
15.3.1.4	CDD_Time 1.20;0 Time synchronisation of the centralized defects diary	5678
15.3.1.5	SWADPCAN 2.20;0 software adaptor for CAN	5680
15.3.2	BRKECU BRKECU	5684
15.3.2.1	BrKECU_Brk 40.50;0 working process for brake signals	5684
15.3.3	DSPLECU DSPLECU	5690
15.3.3.1	DsplECU_Dspl 41.20;0 signal evaluation for instrument-cluster messages	5690
15.3.4	GBXECU GBXECU	5701
15.3.4.1	GbxECU_Gbx 40.60;0 process for CAN message TSC1	5701
15.3.4.2	GbxECU2MILLmp 3.21;0 Adapter between DS and GS MIL interface for the transmission ECU	5710
15.3.5	ACCECU ACCECU	5712
15.3.5.1	AccECU_Acc 2.22;1 process for CAN messages received from ACC ECU	5712
15.4	DiagCom DiagCom	5736
15.4.1	DiagCom_FG DiagCom_FG	5736
15.4.1.1	DiagCom_Distrib 3.10;1 Session Layer Module: Service Distributor	5736
15.5	DIAG DIAG	5736
15.5.1	DiagAppl DiagAppl	5736
15.5.1.1	DiagAppl_Std 1.10;2 Diagnosis Software Application Standard	5736
15.6	INM INM	5738
15.6.1	INM_FG INM_FG	5738
15.6.1.1	Inm_BbCan 1.10;1 CAN communication and the monitoring of the network	5738

15.6.1.2	Inm_CanDII 1.10;0 interface between the monitoring function and the CAN drivers	5740
15.6.1.3	Inm_CanHandler 1.10;0 processes needed for the network monitoring	5742
15.6.1.4	Inm_CanNm 1.32;0 nodes and busoff monitoring	5743
15.6.1.5	Inm_DCan 1.11;3 save monitoring result in DSM	5748
15.7	Frm 1.20;0 Frame Handler	5751
15.7.1	Frm_FG Frm_FG	5752
15.7.1.1	Frm_Std 1.20;0 Frame Handler Standard	5752
15.7.2	FRMSCH FRMSCH	5753
15.7.2.1	FrmSch_Std 1.20;0 Frame Scheduler Standard	5753
15.7.3	FrmAppl FrmAppl	5753
15.7.3.1	FrmAppl_Std 40.31;0 Frame Manager Application Standard	5753
15.7.3.2	FrmAppl_Std_Brk 40.36;0 receive process for message from brake ECU ...	5756
15.7.3.3	FrmAppl_Std_Dspl 41.10;0 receive process for message from instrument cluster ECU	5759
15.7.3.4	FrmAppl_Std_Eng 60.34;0 send process for engine messages by MOTRONIC	5765
15.7.3.5	FrmAppl_Std_Gbx 40.53;0 receive process for messages from gearbox ECU	5770
16	DIAGINF DIAGINF	5774
16.1	Signals 1.20;0 Signals	5774
16.2	ATS 1.20;0 Advanced Test Service	5779
16.2.1	ATS_FG ATS_FG	5780
16.2.1.1	ATS_Std 1.30;0 Handling of actuator test demands with dignostics	5780
16.2.2	ATS_NC ATS_NC	5785
16.2.2.1	ATS2BPA 1.10;1 ATS configuration of boost pressure actuator	5785
16.2.2.2	ATS2CP 1.10;1 ATS configuration for tank purge valve	5787
16.2.2.3	ATS2CTP 4.10;0 Actuator test for CTP (additional cabin heating)	5789
16.2.2.4	ATS2DUV 1.10;1 ATS configuration of dump valve	5791
16.2.2.5	ATS2ETR 1.10;0 ATS configuration for ETR	5793
16.2.2.6	ATS2FCTL 1.20;1 ATS configuration of Fan device	5796
16.2.2.7	ATS2FCTLADD 1.10;0 ATS configuration of Fan actuator	5798
16.2.2.8	ATS2FLPMP 1.10;0 ATS configuration for fuel pump	5800
16.2.2.9	ATS2IGN 1.20;0 ATS interface for ignition test	5802
16.2.2.10	ATS2OELP 1.20;0 ATS configuration for Oil Pump	5810
16.2.2.11	ATS2THRVLV 1.10;0 ATS configuration for throttle valve	5812
16.2.2.12	ATS2TRBWPMP 1.10;0 ATS configuration of turbo water pump	5814
16.2.2.13	ATS2WTPMP 1.20;1 ATS configuration of water pump	5816
16.3	I15031 I15031	5819
16.3.1	I15031_FG I15031_FG	5819
16.3.1.1	I15031_srv1 1.40;0 Request current powertrain diagnostic data	5819
16.3.1.2	I15031_srv2 1.40;0 Request powertrain freeze frame data	5822
16.3.1.3	I15031_srv37 1.20;0 Request of emission-relevant DTC's from current/completed driving cycle(s)	5825
16.3.1.4	I15031_srv4 1.20;0 Clear and reset emission-related diagnostic information	5827
16.3.1.5	I15031_srv6 1.20;0 Request on-board monitoring test results for specific monitored systems	5829
16.3.1.6	I15031_srv9 1.20;0 Request vehicle informations	5830
16.3.2	I15031Appl I15031Appl	5836
16.3.2.1	I15031_APPL_SRV4 2.20;0 I15031 Scantool Mode 4: Configurable File	5836
16.4	BASSVR BASSVR	5837
16.4.1	BASSVRAPPL BASSVRAPPL	5837
16.4.1.1	MANUFRZFR 1.30;1 Manufacturer freeze frame	5837
16.4.1.2	MANUZAPV 1.20;0 Management of the Z.APV into the EEP	5838
16.4.1.3	MANUDLC 1.10;1 Handling of manufacturer's DLC	5838
16.4.2	I14230APPL I14230APPL	5839

16.4.2.1	I14230APPL_CDI 1.50;1 ISO14230 (KWP2000): Application of ClearDiagnosticInformation(\$14)	5839
16.4.2.2	I14230APPL_IOLI 4.20;1 ISO14230 (KWP2000): Application of InputOutputControlByLocalIdentifier(\$30)	5840
16.4.2.3	I14230APPL_RD 2.10;0 ISO14230 (KWP2000): Application of Request-Download(\$34)	5842
16.4.2.4	I14230APPL_RDLI 6.61;0 ISO14230 (KWP2000): Application of ReadDataByLocalIdentifier(\$21)	5850
16.4.2.5	I14230APPL_RDTC 1.10;1 ISO14230 (KWP2000): Application of ReadDiagnosticTroubleCodes	5861
16.4.2.6	I14230APPL_RESET 1.51;0 ISO14230 (KWP2000): Application of ECUReset(\$11)	5862
16.4.2.7	I14230APPL_RU 1.10;0 ISO14230 (KWP2000): Application of Request-Upload(\$35)	5866
16.4.2.8	I14230APPL_SA 2.20;0 ISO14230 (KWP2000): Application of Security-Access(\$27)	5867
16.4.2.9	I14230APPL_SPCO 2.10;0 ISO14230 (KWP2000): Application of StopCommunication(\$82)	5868
16.4.2.10	I14230APPL_STCO 1.20;1 ISO14230 (KWP2000): Application of StartCommunication(\$81)	5869
16.4.2.11	I14230APPL_STDS 1.20;0 ISO14230 (KWP2000): Application of StartDiagnosticSession(\$10)	5870
16.4.2.12	I14230APPL_STRBLI 1.50;1 ISO14230 (KWP2000): Application of StartRoutineByLocalIdentifier(\$31)	5871
17	DS DS	5876
17.1	DSM DSM	5876
17.1.1	DSMFPM DSMFPM	5876
17.1.1.1	DDRC 170.133;0 service to support Debouncing of Diagnostic Results (diagnostic Checks)	5876
17.1.1.2	DFC 170.133;0 Diagnostic Fault Check	5883
17.1.1.3	DFES 170.133;2 Diagnostic fault event storage	5892
17.1.1.4	DFP 170.133;1 Diagnostic Fault Path	5919
17.1.1.5	DSMAux 170.133;1 Support functions of fault event storage	5922
17.1.1.6	DSMDur 170.133;1 Duration and Event Counter	5928
17.1.1.7	DSMRdy 170.133;0 Support for readiness computation	5933
17.1.1.8	DTOP 1.10;2 Diagnosis; operating time	5940
17.1.1.9	DTR 170.133;0 Diagnostic Test Result, Mode\$06 support	5941
17.1.2	DSMINH DSMINH	5944
17.1.2.1	DINH 170.133;0 Inhibit-handler	5944
17.1.2.2	DSQ 170.133;0 Diagnostic Signal Quality	5951
17.1.3	DSMSCHED DSMSCHED	5954
17.1.3.1	DSCHED 170.133;0 Diagnosis scheduler	5954
17.1.3.2	DSMBDEP 1.41;3 Calculation of GDI-Mode priorities	5966
17.1.4	DSMIUMPR DSMIUMPR	5973
17.1.4.1	DIUMPR 170.133;1 in use performance ratio - support	5973
17.1.5	ERRLMP ERRLMP	5993
17.1.5.1	ErrLmp2MED 1.20;1 Interface Adapter ErrLmp to MED	5993
17.1.5.2	MILLMP_VD 3.10;1 Virtual device for the MIL control	5994
17.1.5.3	SVSLMP_VD 1.30;0 virtual device for the SVS control	5999
17.2	DS_NC DS_NC	6001
17.2.1	DS_NC_FG DS_NC_FG	6001
17.2.1.1	DSM_Conf 18.10;0 DSM project configuration (MEx17)	6001
17.2.1.2	DSM2MED 3.20;0 Interface Adapter DSM to MED	6008
17.2.1.3	DTRG2MED 1.20;1 Interface adapter Diagnostic Triggers to MED	6008
18	HWE HWE	6010
18.1	CY320 1.10;2 Peripheral Device CY320	6010
18.2	R2S2 1.10;0 R2S2 Device Driver	6014
18.3	PWM 1.10;1 Pulse Width Modulation	6015
18.4	Fadc 1.10;0 FastAnalogDigitalConverter	6016

18.5	Eep 1.10;0 Eeprom and Emulation Handler	6017
18.5.1	EEP_FG EEP_FG	6019
18.5.1.1	Eep2MED 1.20;2 Interface Adapter EEPROM and NVRAM Emulation to MED17.....	6019
18.6	Cpu 1.20;0 Central Processing Unit	6022
19	CSW CSW	6023
19.1	Dme 1.10;0 CSW Dynamic Memory Emulation	6023
20	EOS EOS.....	6024
20.1	Reset 1.20;0 Resetmonitor and Resethandler	6024
20.2	Rtmo 1.30;0 Run-Time-Measurement Online	6027
21	SU_NC SU_NC.....	6030
21.1	SwsPSA SwsPSA	6030
21.1.1	SwsPSAAdap SwsPSAAdap.....	6030
21.1.1.1	COV_SwSPSA 2.40;2 Intersection RB World to PSA Autosar	6030
21.1.1.2	EPM_SwSPSA 1.10;2 Intersection RB World to AutoSAR world	6044
21.1.1.3	OBV_SwSPSA 2.10;2 Intersection RB World to PSA Autosar	6046
21.1.1.4	OTM_SwSPSA 1.10;2 Intersection RB World to AutoSAR world	6047
21.1.1.5	OVS_SwSPSA 1.20;1 Intersection RB World to PSA Autosar	6048
21.1.1.6	PT_SwSPSA 1.140;2 Adapter Software Sharing with reference to power train	6051
21.1.1.7	SDE_SwSPSA 1.11;2 Intersection RB World to PSA Autosar	6072
21.1.1.8	SIA_MANUAL 97.10;0 Immobilizer user guide summary.....	6074
21.1.1.9	SIA_SwSPSA 1.21;0 Interface RB World to Immobilizer.....	6077
21.1.1.10	SPDGOV_SwSPSA 1.10;2 Intersection RB World to PSA Autosar	6080
21.1.1.11	SYC_SwSPSA 1.30;0 Intersection RB World to PSA Autosar.....	6081
21.1.1.12	VMD_SwSPSA 1.10;2 Intersection RB World to AutoSAR world	6083
21.2	MF_NC MF_NC	6085
21.2.1	FG_NC FG_NC	6085
21.2.1.1	BBZMS 3.20;0 BBZMS	6085
21.2.1.2	DNSTT 1.51;1 Supervision of starting up	6087
21.2.1.3	LAYSUNC 12.20;0 intersection function Bosch world BMW world	6096
21.2.1.4	LAYTSTMO 12.20;0 intersection to TSTMO	6098
21.2.1.5	PIDPRINCE 2.10;1 PID-Controller Prince	6101
21.2.1.6	SSTBER 70.20;0 calculation of group set points	6102
21.2.1.7	SWADP 660.70;0 Software adapter	6109
21.2.1.8	SWADP_DMDMIL 1.20;1 SWADP for DMDMIL 36.10.....	6129
21.2.1.9	SWADPGEN 1.50;2 PRINCE - MED17 - Layer for BMW-Powermanagement Packet	6131
22	NWSD 1.20;0 A : Prince PSA/BMW Specific - Optimised VANOS position during transients	6138
II	Cross Reference Lists	6141
III	Production note.....	6667