

Engine Management System

BMW MSD81 6 Cyl

Specification

Transmittal, reproduction, dissemination and/or editing of this document as well as utilisation of its contents and communication thereof to others without expressed authorisation are prohibited. Offenders will be held liable for payment of damages. All rights created by patent grant or registration of a utility model or design patent are reserved.

Customer: BMW
Software Version: 4DCKM1Y0_4CC3KM0S
Date: 2013-02-13
Document Key: 10171571 SPE 000 AO

Specification to customer

Diese Information ist lediglich eine technische Beschreibung des Produktes. Sie stellt keine Beschaffenheits- oder Haltbarkeitsgarantie im Sinne des Paragraphen 443 BGB dar.

This information is exclusively a technical description of the products. It is not meant or intends to be a special guarantee for a particular quality or durability with regard to section 443 BGB (German Civil Code).


Project: BMW MSD81 6 Cyl

Engineering change Master ECM: 10223714

Customer: BMW

	Name	Department	Phone	Date	Sign
Designed by	Radlbeck Juergen	P ES SYS CSW CEE1 RBG4	+49 941 790 3558	2013-02-13	
Released by	Tettenborn Frank	P ES SYS PM	+49 941 790 3688	2013-02-13	

Transmittal, reproduction, dissemination and/or editing of this document as well as utilisation of its contents and communication thereof to others without expressed authorisation are prohibited. Offenders will be held liable for payment of damages. All rights created by patent grant or registration of a utility model or design patent are reserved.

Released by Tettenborn Frank		Date 2013-02-13	File 4DCKM1Y0_4CC3KM0S
	Baseline 4DCKM1Y0_4CC3KM0S	Project BMW MSD81 6 Cyl	
	Document key 10171571 SPE 000 AO	Pages Page 1 of 8404	
Regensburg (RGB)		Copyright (C) Continental AG,2007	A4: 2007-11

Specification to customer

Version history

Document Version	Previous Version	Change Description(including number)
AO	AN	10223714

Transmittal, reproduction, dissemination and/or editing of this document as well as utilisation of its contents and communication thereof to others without expressed authorisation are prohibited. Offenders will be held liable for payment of damages. All rights created by patent grant or registration of a utility model or design patent are reserved.


Released by Tettenborn Frank	Date 2013-02-13	File 4DCKM1Y0_4CC3KM0S
	Baseline 4DCKM1Y0_4CC3KM0S	Project BMW MSD81 6 Cyl
	Document key 10171571 SPE 000 AO	Pages Page 2 of 8404
Regensburg (RGB)	Copyright (C) Continental AG,2007	A4: 2007-11

Table of Contents

0 - Basic SW General Operation	513
0.1 Non volatile data management general	514
0.1.1 Introduction	514
0.1.2 Abbreviations and terms	514
0.1.3 General description	514
0.1.4 Hardware constraints	514
0.1.5 NVMY system events	515
0.1.6 Flight recorder on customer tool request	515
0.2 Non volatile data management manager	516
0.2.1 NVMY Manager	516
0.2.2 STATES description	516
0.3 Non volatile data management services definitions	520
0.3.1 RESTORE service (FOREGROUND)	520
0.3.2 CLEAR INIT request (FOREGROUND)	520
0.3.3 READ service (FOREGROUND)	520
0.3.4 READ FOR DIAG service (BACKGROUND)	521
0.3.5 WRITE service (BACKGROUND)	521
0.3.6 STORE service (BACKGROUND)	521
0.3.7 SHUTDOWN service (FOREGROUND)	521
0.3.8 NVMY coherency error services (FOREGROUND)	522
0.4 Non volatile data management mechanisms	523
0.4.1 Initialization in case of corrupted channel	523
0.4.2 Initialization in case of NVMY coherency error	523
0.4.3 Initialization in case of tuning request	524
0.4.4 Initialization in case of "First power-on"	524
0.4.5 Hard initialization	525
0.5 Non volatile data management configuration	526
0.5.1 Non Volatile Data – read from/write to memory	528
0.5.2 Non Volatile Data - Selective adaptation ranges	540
0.6 Customer reprogramming	547
0.6.1 Introduction	547
0.6.2 General description	547
0.6.3 Communication between reprogramming Tool and ECU	548
0.6.4 Functional memory layout	548
0.6.5 Security mechanisms	550
0.6.6 Reprogramming procedure activation	552
0.6.7 Reprogramming states	553
0.6.8 Reprogramming Status Word definition	554
0.7 CPU measurement	556
0.8 ECU warm reset detection	560
0.8.1 Export Actions	562
0.8.2 Handling of ECU-Reset detection in error management	570

1 - General	575
1.1 ENTE Configuration data	576
1.1.1 Local configuration data	577
1.2 System overview and description	578
1.2.1 System Pictures	578
1.2.2 Dataset identification and checksum calculation	580
1.3 Nomenclature of the used data names and abbreviations	582
1.4 SYCF Configuration data	604
1.5 ENRD General	607
1.5.1 General description	607
1.5.2 Architecture Overview	607
1.5.3 Description of the containing functions	607
1.6 ENSD General	609
1.6.1 General Description	609
1.6.2 Short description of the containing functions	610
1.7 ERRM General	612
1.8 IGRE General	615
1.8.1 Purpose	615
1.9 LACO General	616
1.9.1 Lambda control	617
1.9.2 Lambda control conditions (Variant 2: Lin/Bin only)	617
1.9.3 Lambda adaptation	617
1.9.4 Lambda adaptation in warm-up phase (Variant 2: Lin/Bin only)	617
1.9.5 Dynamic fuel trim	618
1.9.6 WRAF sensor characteristic line adaptation with trim control (Variant 2: Lin/Bin only)	618
1.9.7 Valid cond. check for WRAF sensor char. line adap. with trim control (Variant 2: Lin/Bin only)	618
1.9.8 Mean value calculation for limited dynamics	618
1.9.9 Fuel system monitoring	618
1.9.10 Activation of fuel system monitoring	618
1.10 MISF General	619
1.11 VHSL General	621
1.12 OBDC General	623
1.13 INJR Configuration data	626
1.13.1 Global configuration data	629
1.13.2 Local configuration data	629
1.14 EVAC Configuration data	632
1.14.1 Local configuration data	632
1.15 IGRE Configuration data	633
1.15.1 Global configuration data	633
1.15.2 Local configuration data	633
1.16 MISF Configuration data	635
1.16.1 Global configuration data	635

1.16.2	Local configuration data	635
1.17	ENRD Configuration data	637
1.17.1	Local configuration data	637
1.18	ENSD Configuration data	638
1.18.1	Global configuration data	639
1.18.2	Local configuration data	639
1.19	ENSD interface adaptation module	642
1.20	NOXD Configuration data	643
1.21	NOXM Configuration data	644
1.22	ERRM Configuration data	645
1.22.1	Global configuration data	646
1.22.2	Local configuration data, project specific for 4-cyl /6-cyl /8-cyl engines	646
1.23	EGCP Configuration data	651
1.23.1	Global configuration data	651
1.23.2	Local configuration data	652
1.24	FUSL Configuration data	653
1.24.1	Local configuration data ECU with current feedback of VCV via ATIC 39	653
1.25	Variant coding	654
1.25.1	General	659
1.25.2	Automatically learnt variants	659
1.25.3	Calibrateable or automatically learnt variants	666
1.25.4	Engine Configuration Coding	667
1.25.5	Calibrateable Variants	668
1.25.6	Merge of learned variants for BMW- environment	672
1.25.7	Runtime solution	674
1.25.8	Learnt ECU variants	676
1.26	SDA - AT library short description	679
1.26.1	General	679
1.26.2	Block versioning	679
1.26.3	Functional behaviour	679
1.26.4	Action Handling	680
1.26.5	Application Condition	681
1.26.6	Basic Algorithms	682
1.26.7	Calibration_Data_Handling	683
1.26.8	Control_Structures	687
1.26.9	Signal Types	690
1.26.10	Signals	691
1.26.11	Vectors and Matrices	697
1.26.12	SDA 4.0 and 3.1 specific blocks	706
1.27	SDA - AT basic blocks short description	719
1.27.1	Remarks for block version V 5.x	719
1.27.2	Remarks for block version V 6.x	721
1.27.3	Directly triggered blocks	723
1.27.4	Block versioning	723
1.27.5	Arithmetic Operators	723
1.27.6	Comparison Operators	725
1.27.7	Counter and Timer	726
1.27.8	Delay Blocks	730

1.27.9	Integrators	732
1.27.10	Logical Operators (V. 5) (V. 6)	734
1.27.11	Low and highpass	735
1.27.12	Memory Blocks	739
1.27.13	Nonlinear Blocks - automotive blockset	742
1.27.14	Controller_Blocks (AT_Extended_Lib)	748
1.27.15	Nonlinear	750
1.27.16	Signals & Systems	753
1.27.17	Stateflow	761
1.27.18	Functional differences between blocks from SDA 5.0 and blocks from 4.0 and 3.1	761
1.28	SDA - How to read SDA based specification	781
1.28.1	Introduction	781
1.28.2	Matlab/Simulink/Stateflow.	781
1.28.3	SDA model overview	782
1.28.4	SDA specific Simulink notation	784
1.28.5	Structure of the SDA-Specification	785
1.28.6	Special Simulink blocks and their usage	785
1.28.7	How to read SDA conform Stateflow charts	786
1.29	Initialization of variables from non implemented functions	797
1.29.1	Miscellaneous	813
1.29.2	Variables definition for missing Secondary air function	813
1.29.3	Error Flags	813
1.29.4	Interfaces to chapter serial communication	814
1.29.5	Outputs due to aggregate implementation	814
1.29.6	Adaptation module for non implemented VVL functions	814
1.29.7	Adaptation module for non implemented STST (MSA) functions	814
1.29.8	Adaptation module for non implemented TÖNS functions	815
1.29.9	For non implemented serielle communication	815
1.29.10	Variable definitions for missing CAN11hex functionality	815
1.29.11	Variables only necessary for IScan	815
1.29.12	Variables required by Software	816
1.29.13	Variables used by OBDC	816
1.29.14	Output AGGR's - EGCP	816
1.29.15	Output AGGR's - VHMD	817
1.29.16	Output AGGR's - DGNC	817
1.29.17	Output AGGR's - ENSS	817
1.29.18	Output AGGR's - SYCF	818
1.30	OBDC Configuration data	819
1.30.1	Configuration of OBD services	820
1.30.2	Autolearning and microcontroller configuration	820
1.30.3	Configuration of project specific calibration data	821
1.30.4	Configuration of oxygen sensors (PID13)	821
1.30.5	Position of oxygen sensors (PID13)	822
1.30.6	Configuration of oxygen sensors (PID1D)	822
1.30.7	Position of oxygen sensors (PID1D)	822
1.30.8	Configuration of secondary air pump for PID12	823
1.30.9	Support of secondary air pump	823
1.30.10	Configuration of EVAP Monitor	823
1.30.11	Support of EVAP Monitor	823
1.30.12	Support of Mass Air Flow Sensor Data (PID 66)	823
1.30.13	Support of Intake Air Temperature Sensor Data (PID 68)	824
1.30.14	Support of Throttle Actuator Control System Data (PID 6C)	824
1.30.15	Support of Fuel Pressure Control System Data (PID 6D)	825
1.30.16	Configuration for service \$09 – CAL-ID calculation (used for L6)	825

1.31	LACO Configuration data	826
1.31.1	Local configuration data	826
1.32	MFMA Configuration data	827
1.32.1	Global Configuration Data	827
1.32.2	Local Configuration Data	827
1.33	IMMO Configuration data	828

2 - Basic SW Inputs and Outputs **830**

2.1	Standard analog inputs	831
2.2	Acquisition of air mass flow for frequency air mass sensor	833
2.2.1	Calculation and Diagnosis of the mean period time	836
2.2.2	Basic air mass flow calculation for frequency MAF sensor	838
2.2.3	Calculation of measured air mass flow buffer	839
2.2.4	Calculation of measured mean value of air mass flow	841
2.3	Manifold air pressure acquisition	843
2.4	Acquisition of after relay battery voltage	845
2.5	Acquisition of after key battery voltage	847
2.6	ENTE - Requirements to infrastructure interface (ECT)	848
2.6.1	Pulse width modulated outputs	848
2.7	Acquisition of combustion noise	849
2.8	Standard management of logic inputs	851
2.8.1	Standard management of logic inputs	851
2.9	Definition of logic inputs	852
2.10	Acquisition of crankshaft signal (internal version)	853
2.10.1	Crankshaft Synchronization	854
2.10.2	Definition of the sub function task	861
2.10.3	Requirements to infrastructure	865
2.10.4	System requirements to sensor signal	869
2.10.5	Hardware and HAL requirements	870
2.11	Acquisition of camshaft signal (internal version)	871
2.11.1	Camshaft Self-Synchronization	875
2.11.2	Camshaft/Crankshaft Synchronization	879
2.11.3	Engine Position Interface for Pre-Injection	882
2.11.4	Definition of the sub function tasks	884
2.11.5	Requirements to Infrastructure	898
2.12	Acquisition of wheel speed sensor	901
2.13	Acquisition of oil sensor	903
2.13.1	Acquisition of oil pressure switch	903
2.13.2	Acquisition of oil pressure sensor	905
2.14	Key position determination	906
2.14.1	Ignition : Key on recognition	907

2.15	General management of logic outputs	911
2.15.1	General management of logic outputs	911
2.16	Definition of logic outputs	912
2.16.1	Definition of logic outputs	912
2.16.2	Engine speed signal ESS	913
2.17	General management of PWM outputs	914
2.17.1	General management of PWM outputs :	914
2.18	List of PWM outputs/Definition of PWM outputs	915
2.18.1	List of PWM outputs	915
2.18.2	Output PWM for inlet and outlet VANOS	916
2.18.3	Output for HPDI relay	916
2.19	Spark advance and dwell output	917
2.19.1	Minimum /Maximum dwell time calculation	918
2.19.2	Half static of full static	918
2.19.3	Limp home without cam signal	918
2.20	Ignition output diagnosis	920
2.20.1	IGBT Protection (with ATM46 /Combined ASIC)	921
2.21	Engine speed (Tacho) output	925
2.22	BIOS H-bridge diagnosis function	926
2.23	KWP 2000	927
2.23.1	Normative reference	927
2.23.2	Customers reference	927
2.24	Segment time calculation	929
2.25	Dwell time adaptation	932
2.26	Dwell time adaptation (Appl. Inc.)	937
2.26.1	Channel configuration for diagnosis	937
2.26.2	Reading of current feedback flag for dwell time adaptation	938
2.27	Acquisition of fuel pressure	940
2.28	Multi function steering wheel interface	942
2.28.1	Serial data line from the MSW	942
2.29	EGCP configuration of infrastructure interface	944
2.30	O2 sensor (lin, up) SPI interface BSW	955
2.30.1	Acquire raw data from the Infrastructure (BSW)	956
2.30.2	Descripton of the interaction between infrastruture and the WRAF controller	957
2.30.3	BSW Description	958
2.31	O2 sensor signal acquisition general	967
2.32	O2 sensor (lin, up) signal acquisition for heater coupling diagnosis	970
2.33	O2 sensor (lin, up) signal acquisition for CILC	973

3 - AGGR adaptation modules	977
3.1 AGGR adaptation: DRPD	978
3.2 AGGR adaptation: VHMD	979
3.2.1 Outputs for BMW which are not defined as VHMD exported data	979
3.3 AGGR adaptation: VHST	980
3.3.1 Outputs for BMW functions which are not defined as VHST exported data	980
3.4 AGGR adaptation: TQDR	981
3.5 AGGR adaptation: INSY	982
3.5.1 Outputs for supplier aggregates	982
3.6 AGGR adaptation: AIRT	984
3.6.1 Calculation at reset	984
3.6.2 Calculations at Engine stop to engine run	985
3.6.3 Formula section	985
3.7 AGGR adaptation: THRO	986
3.8 AGGR adaptation: EGRC	987
3.9 AGGR adaptation: FUSL	988
3.9.1 Outputs for SV aggregates, SV internally	989
3.9.2 Miscellaneous	990
3.10 AGGR adaptation: NOXD	991
3.10.1 Inputs to aggregate NOXD - 10ms (fast variable assignments)	993
3.10.2 Outputs of aggregate NOXD - 10ms	993
3.11 AGGR adaptation: NOXM	996
3.11.1 Inputs to aggregate NOXM - 20ms	997
3.11.2 Outputs of aggregate NOXM - 20ms	997
3.11.3 Non implemented functions	998
3.12 AGGR adaptation: CYBL	999
3.13 AGGR adaptation: EVAC	1000
3.14 AGGR adaptation: EVAM	1001
3.14.1 Interface from/to TEV-check, leak detection and other supplier internal functions .	1002
3.15 AGGR adaptation: IGRE	1005
3.15.1 Reset of New Ignition Angle Range to old in Integration process	1005
3.16 AGGR adaptation: EGCP	1006
3.17 AGGR adaptation: LACO	1014
3.17.1 Outputs for SV aggregates, SV internally	1020
3.17.2 Activation flag for HOM-mode due to difference in lambda values in stratified . . .	1022
3.17.3 Calculation of bitmasks for Lamda controller functions.	1024
3.17.4 Update according to SAE paper	1035
3.18 AGGR adaptation: EGTR	1037
3.18.1 Outputs for supplier aggregates, supplier internally	1037
3.19 AGGR adaptation: EXTD	1039

3.20	AGGR adaptation: EXTC	1040
3.21	AGGR adaptation: ENSD	1042
3.21.1	Outputs for supplier functions	1042
3.21.2	Segment time acquisition for partial segments	1043
3.22	AGGR adaptation: ENTE	1045
3.23	AGGR adaptation: PWSL	1046
3.23.1	Outputs for supplier aggregates, supplier internally	1046
3.24	AGGR adaptation: STSY	1047
3.24.1	Outputs for BMW functions which are not defined as STSY exported data	1047
3.25	AGGR adaptation: HVAC	1048
3.25.1	Outputs for BMW functions which are defined as HVAC exported data	1048
3.26	AGGR adaptation: ERRM	1049
3.26.1	General interface description	1070
3.26.2	Output - data of diagnosis handled by customer OBJ File	1083
3.26.3	Rate - base monitor Interface for OBJ-file diagnosis	1084
3.26.4	Outputs for supplier aggregates, supplier internally	1085
3.27	AGGR adaptation: ECME	1087
3.28	AGGR adaptation: OBDC	1088
3.28.1	Initialization of secondary-air variables	1088
3.28.2	Calculation of non-implemented variables	1088

4 - System variables 1090

4.1	ECU state detection	1091
4.2	Actuator position determination	1097
4.2.1	Signal pre processing	1098
4.2.2	Signal standardization	1099
4.3	Coolant temperature	1100
4.3.1	Coolant temperature gradient monitoring	1101
4.3.2	Coolant temperature acquisition	1102
4.3.3	Coolant temperature at engine start	1103
4.3.4	Coolant Temperature at engine stop	1104
4.4	Coolant temperature substitute model	1105
4.5	Driving off assistance	1112
4.5.1	Initialisation:	1117
4.5.2	Function Overview:	1117
4.6	Engine speed setpoint calculation	1122
4.6.1	Initialisation at system event reset	1129
4.6.2	Calculation at 1 second recurrence	1131
4.6.3	Formula section.	1132
4.7	Engine speed limit coordination	1148
4.8	Vehicle speed limit calculation	1158
4.8.1	SUB FUNCTION: OPM_RESET	1160

4.8.2	SUB FUNCTION: OPM_100MS	1161
4.9	Ambient pressure acquisition	1163
4.10	Exhaust pipe variables	1167
4.10.1	Calculation of the exhaust manifold pressure PRS_EX	1167
4.11	Mass air flow throttle sensor variables	1169
4.11.1	Standardization of the TPS-Voltage	1170
4.11.2	Selection of actual value TPS_AV /TPS_AV_CTL	1171
4.11.3	TPS gradient limitation	1173
4.11.4	Segment synchronous throttle valve position: (TPS_SEG)	1174
4.12	Vehicle speed	1176
4.12.1	Calculation of Speed Signal VS	1177
4.12.2	Filter of vehicle speed	1178
4.12.3	Internal vehicle speed signal	1179
4.12.4	Internal vehicle speed signal by gearbox revolution speed sensor (only FlexRay)	1181
4.12.5	Error Handling	1181
4.13	Distance counter	1183
4.14	Battery voltage	1185
4.14.1	Computation of VB	1186
4.14.2	Secured battery voltage computation	1187
4.14.3	Battery voltage conditions for diagnosis /jump start detection	1187
4.14.4	Moving average value for battery voltage	1191
4.15	Air mass flow sensor variables	1192
4.15.1	Air-mass flow acquisition MAF_KGH_MES	1192
4.15.2	Air-mass Flow Acquisition MAF_MES	1193
4.15.3	Fade out of Mass Airflow Sensor	1194
4.16	Air mass flow variables	1195
4.16.1	Air-mass flow MAF_KGH	1195
4.16.2	Air-mass flow difference between two segments	1196
4.16.3	Air mass difference for rapidly falling load (MAF_MMV)	1196
4.17	Manifold air pressure sensor variables	1198
4.17.1	Adaptation of sensor characteristic	1203
4.18	Volumetric efficiency	1206
4.19	Pressure decrease through the air cleaner	1209
4.20	Intake manifold model (Appl. Inc.)	1211
4.21	Intake manifold model	1212
4.21.1	Calculation of the manifold pressure MAP	1213
4.21.2	Calculation of MAP_FG	1213
4.21.3	Calculation of maximum possible mass air flow MAF_MAX_COR and the ratio between actual and maximum mass air flow FAC_MAF_MAX	1213
4.22	Ambient air temperature calculation	1214
4.22.1	Calculation of ambient temperature at start(ES to ERU)	1214
4.22.2	Calculation of ambient temperature at Engine stop(ERU to ES)	1215
4.23	Coolant temperature (radiator outlet)	1218
4.23.1	Coolant temperature (radiator outlet) gradient monitoring	1219

4.23.2	Coolant temperature (radiator outlet) acquisition	1219
4.23.3	Coolant temperature (radiator outlet) at engine start	1221
4.23.4	Temperature difference between the coolant temperature sensors	1221
4.24	Oil temperature selection	1223
4.24.1	Oil overtemperature detection - Detection algorithm	1224
4.24.2	Oil overtemperature detection - Environmental data	1224
4.25	Basic air temperature variables	1226
4.25.1	Temperature determination	1227
4.25.2	Formula section	1228
4.25.3	Calculation at Engine stall to engine run event	1231
4.26	Fuel temperature	1232
4.26.1	FUSL_M400K/RST	1237
4.26.2	FUSL_M400K/OPERATE	1241
4.27	Exhaust gas temperature	1253
4.27.1	Aquisition of VP_TEG_PCAT_DOWN	1253
4.27.2	Calculation of Exhaust Gas Temperatures	1254
4.28	ECU temperature	1256
4.28.1	ECU temperature TECU:	1257
4.29	Pedal value sensor variables	1269
4.29.1	Filtration of the PVS-values	1274
4.29.2	Standardisation of the PVS-voltage value	1274
4.29.3	Value selection	1274
4.29.4	Driver progression correction	1276
4.29.5	Kick-Down-Recognition	1280
4.29.6	Selection of maximum pedal value	1281
4.29.7	Calculation of PV_AV gradient:	1281
4.30	Fuel pressure	1283
4.30.1	Initialisation function	1285
4.30.2	Signal acquisition	1286
4.30.3	Fuel pressure determination	1288
4.30.4	Coordination function for normal and LIH operation	1288
4.31	Fuel pressure of low pressure pump	1290
4.31.1	Fuel pressure acquisition of low pressure signal	1290
4.32	Gear detection (Appl. Inc.)	1298
4.32.1	Plausibility of gear shift setpoint displayed on CAN	1299
4.33	Gear ratio	1302
4.33.1	Manual transmission (LV_AT = 0 and LV_VAR_TCT = 0)	1304
4.33.2	Twin Clutch Transmission (LV_VAR_TCT = 1)	1306
4.33.3	Automatic transmission (LV_AT = 1)	1307
4.33.4	Information if the reverse gear (AT or TCT) is activ/inactiv :	1307
4.33.5	Low range detection (LV_RNG_L, LV_RNG_L_AT)	1307
4.33.6	Common Gear Ratio Independent from AT or MT (GEAR)	1309
4.33.7	Gear Ratio for exhaust flap functionality	1309
4.34	Drive train engaged	1310
4.34.1	Initialisation at Reset	1311
4.34.2	Formula section	1312
4.35	O2 sensor (lin, up) SPI interface ASW - BSW	1313

4.36	O2 sensor (lin, up) SPI interface ASW - BSW (Appl. Inc.)	1318
4.37	O2 sensor (lin, up) element temperature determination	1320
4.38	O2 sensor (lin, up) element temperature determination (Appl. Inc.)	1339
4.39	O2 sensor (lin, up) basic signal processing	1341
4.39.1	EGCP_SIGCVLSL3	1343
4.40	O2 sensor (bin, down) element temperature determination	1364
4.41	O2 sensor (bin, down) element temperature determination (Appl. Inc.)	1379
4.42	NOx sensor interface	1380
4.42.1	NOx concentration signal	1385
4.42.2	Lambda signal	1388
4.42.3	Binary O2 signal	1391
4.42.4	NOx sensor errors	1393
4.42.5	Sensor temperature	1394
4.42.6	NOx sensor self diagnosis states	1395
4.43	NOx sensor interface (Appl. Inc.)	1398
4.43.1	NOx sensor activation data	1400
4.43.2	CAN Protocol	1403
4.44	Clutch switch	1419
4.45	Power steering acquisition	1420
4.45.1	Initialisation	1423
4.45.2	Function overview	1426
4.46	Detection of driver request passive	1442
4.47	Engine off duration	1444
4.48	Engine roughness segment time correction	1447
4.48.1	Phasing reference for the acquisition of engine roughness segment time	1448
4.48.2	Engine roughness segment time acquisition and control	1449
4.48.3	Engine roughness segment time correction	1451
4.49	Engine roughness calculation	1454
4.49.1	Engine roughness segment reference	1456
4.49.2	Engine roughness segments control process	1457
4.49.3	Cylinder specific engine roughness components correction	1458
4.49.4	Engine roughness DRV2 components filter & gain determination	1459
4.49.5	Engine roughness components calculation	1460
4.49.6	Engine roughness values determination	1467
4.50	Engine roughness calculation (Appl. Inc.)	1469
4.50.1	Inhibition of engine roughness adaptive process - Application specific	1469
4.50.2	ER segment adaptive process inhibition related to OBDI diagnosis	1470
4.50.3	End of line & After sale service request to reset ER segment adaptive values	1471
4.50.4	Normalised engine roughness quotient for calibration	1471
4.51	Engine roughness adaptive learning process	1473
4.51.1	Fade out conditions of engine roughness segment adaptive process	1477
4.51.2	End of line specific request for ER segment adaptive values learning process	1481
4.51.3	Engine roughness adaptive learning process management	1482
4.51.4	Engine roughness adaptive values calculation & filtering	1485

4.51.5	Engine roughness adaptive values difference on the same physical segment out of range	1486
4.52	Engine roughness signal preparation for cylinder balancing	1489
4.52.1	SUBFUNCTION: INI	1492
4.52.2	Calculation of OPR_ER_STND and OPR_DRV1 - tasks	1496
4.52.3	SUBFUNCTION: SIG_MNG	1502
4.53	Emission related variables definition	1503
4.53.1	Calculation of minimum /maximum downstream lambda sensor voltage for service \$06	1503
4.54	Runtime counters	1504
4.55	Engine position control	1505
4.55.1	State flow diagram	1508
4.55.2	Definition of the sub-function tasks	1516
4.56	Engine position and speed calculation	1525
4.56.1	Engine Position Calculation Standard Mode	1526
4.56.2	Engine Position Calculation Crankshaft Limp-Home Mode	1526
4.56.3	Segment Period Calculation	1527
4.56.4	Segment number correction in camshaft limp home	1527
4.56.5	Engine speed N, N_32, N_MMV	1528
4.56.6	Fast Engine speed based on last tooth period	1529
4.56.7	Fast Engine Speed based on Half-Segment Period Calculation	1529
4.56.8	Fast Engine Speed based on Crankshaft Tooth Window	1530
4.56.9	Engine speed gradient N_GRD, N_GRD_H_RES	1530
4.56.10	Crankshaft Sensor Phase Angle Correction	1531
4.57	Camshaft adaptation and position output	1533
4.57.1	Engine Position Determination from Camshaft signal	1536
4.57.2	Camshaft Position Output	1536
4.57.3	Camshaft Position Adaptation	1536
4.58	Evaporative emission control variables	1540
4.58.1	Maximum engine speed flag management	1546
4.58.2	Dynamic engine conditions for canister purge	1547
4.58.3	Trailing throttle information for canister purge	1549
4.58.4	Canister purge prohibition after "trailing fuel cut off"	1550
4.58.5	Lambda control limitation reached	1550
4.58.6	Lambda control within functional window	1551
4.58.7	Commutation interruption management	1551
4.58.8	Catalyst purge interruption management	1552
4.58.9	Calculation of PRS_CPS	1553
4.58.10	Preselection of the canister purge state	1553
4.59	Multiplexed variable definition	1559
4.60	CAN messages engine management system	1561
4.60.1	Input messages overview	1589
4.60.2	Output messages overview	1596
4.60.3	Enable conditions for BN 2000 diagnosis	1599
4.60.4	Input messages	1602
4.60.5	Output messages of the DME to the CAN bus	1659
4.60.6	Checkcontrol- Messages	1678
4.60.7	Check Sum Calculation	1696

4.61	CAN messages engine management system (Appl. Inc.)	1710
4.62	CAN messages gateway	1716
4.63	Synchronisation determination in camshaft limp home	1717

5 - Engine operating states **1718**

5.1	General drawing	1719
5.2	Basic operating states	1720
5.2.1	Engine operating state "engine stopped"	1725
5.2.2	Formula Section	1727
5.3	Administration of calculation optimization	1754
5.3.1	Runtime reduction	1755
5.4	Basic functions	1759
5.4.1	Full Load: (LV_FL)	1760
5.4.2	Intercept function : (LV_INF)	1762
5.5	Auxiliary functions	1763
5.5.1	Initialization	1765
5.5.2	Formula section	1765
5.6	Auxiliary start functions	1766
5.6.1	Cycle counter CYC_CAST	1767
5.6.2	Start Break off LV_ST_ES	1768
5.6.3	Restart function detection (LV_REST)	1770
5.6.4	Engine stall detection LV_STALL	1770
5.6.5	After-Start function : (LV_AST)	1772
5.6.6	State warm up	1773
5.6.7	Cumulated time since engine start for OBD scan tool (PID1F)	1774
5.7	Catalyst heating functions	1775
5.7.1	Catalyst Heating functions	1775
5.7.2	Warm-up function : (LV_WUP)	1775
5.8	Catalyst heating coordination	1777
5.8.1	State machine	1781
5.8.2	Conditions for after start heating	1782
5.8.3	Conditions for low load heating	1783
5.8.4	Conditions for desulfation catalyst heating	1786
5.9	Catalyst heating coordination (Appl. Inc.)	1789
5.9.1	Initialisation /NVMY - Handling	1792
5.9.2	Operate Subsystem	1792
5.10	Catalyst heating strategy	1796
5.10.1	Operate Subsystem	1798
5.11	Catalyst heating after start strategy	1801
5.11.1	Initialisation	1804
5.11.2	Actual combustion mode for after start catalyst heating	1805
5.11.3	Requested combustion mode for catalyst heating	1805
5.12	Catalyst heating low load strategy	1809

5.12.1	Initialization	1811
5.12.2	Actual combustion mode for low load catalyst heating	1811
5.12.3	Requested combustion mode for low load catalyst heating	1812
5.13	Catalyst heating for desulfation strategy	1813
5.13.1	Initialisation	1816
5.13.2	100 ms - Task	1816
5.13.3	Segment synchronous task	1816
5.14	Lambda testing for stratified mode	1820
5.15	Combustion state manager (Appl. Inc.)	1822
5.15.1	Variables of Non implemented Functions for combustion management	1824
5.16	Run time optimization by recurrency switch	1825

6 - Ignition 1827

6.1	Ignition angle general	1828
6.1.1	IGSP_M6001	1829
6.2	Ignition angle efficiency	1845
6.2.1	Ignition angle efficiency	1848
6.3	Dwell time period	1873
6.3.1	Dwell time calculation	1873
6.4	Dwell time factor calculation	1874
6.5	Dwell time period for stratified mode	1875
6.6	Dwell time and ignition angle switches for different combustion modes	1876
6.6.1	Update of Ignition angle if homogeneous mode is selected	1878
6.6.2	TD_LIM_MAX calculation	1879
6.6.3	Dwell time switch Ignition Actuator Tests Diagnosis	1879
6.7	Ignition with multiple spark	1881
6.7.1	Calculation of parameters for multiple spark	1884
6.7.2	Settings of multiple spark parameters	1894
6.8	Ignition with multiple spark (Appl. Inc.)	1896
6.8.1	Initialization	1900
6.8.2	Recurrence 100ms	1901
6.8.3	Recurrence 10ms	1902
6.9	Ignition activation control	1909
6.9.1	Normal Mode Activation	1909
6.10	Basic ignition angle at start	1912
6.10.1	IGSP_M6004	1913
6.11	Exhaust gas recirculation correction	1921
6.12	TQM - Minimum ignition angle	1925
6.12.1	IGA_DIF_MIN_H_RNG calculation with extra spark retard for torque intervention and after start management	1928
6.12.2	Limitation of IGA_DIF_MIN_H_RNG for after start management	1933
6.12.3	IGA_MIN switch conditions	1934

6.12.4	Operation mode manager (function OPM_SWI)	1935
6.13	Exhaust gas temperature protection - Minimum ignition angle limitation	1939
6.14	Ignition angle difference for catalyst heating with post injection	1943
6.14.1	Catalyst heating after start	1944
6.14.2	Low load catalyst heating	1946
6.15	TQM - Setpoint ignition angle	1948
6.16	Knock control (Appl. Inc.)	1952
6.16.1	Inhibition of knock control	1953
6.16.2	Excursion Limit Analysis	1953
6.16.3	Pre-Ignition Analysis	1955
6.16.4	Knock Control Measurement CAN-Interface	1957
6.17	Knock control	1960
6.17.1	Pre-processing	1969
6.17.2	Knock Control	1978
6.17.3	Post-processing	1992

7 - Injection

1998

7.1	Final injection timing	1999
7.1.1	Segment synchronous tasks	2013
7.1.2	Calculate interface to monitoring unit:	2031
7.1.3	(1)IF STATE_INJ_MOD_REQ BitwiseAND NC_INJ_MOD_MASK_1 = NC_INJ_MOD_HOM	2032
7.1.4	(1)THEN	2032
7.1.5	FAC_TI_PRS_COR_1 = MEAN(FAC_TI_PRS_COR_1_HOM[])	2032
7.1.6	FAC_TI_PRS_COR_1 = 1	2032
7.1.7	Time synchronous tasks	2033
7.2	Transfer to basic software for injection	2035
7.2.1	Reset tasks	2051
7.2.2	Power stage initialization	2052
7.2.3	End of injection driver initialization	2053
7.2.4	First valid tooth tasks	2054
7.2.5	Crank synchronous tasks	2055
7.2.6	INJBAS triggered tasks	2057
7.2.7	Synchronized start	2064
7.2.8	ECU-state-transition from synchronous to asynchronous state	2065
7.2.9	ECU-state-transition from asynchronous to synchronous state	2065
7.2.10	Ignition key OFF	2066
7.2.11	Ignition key on	2066
7.2.12	Engine stop	2067
7.2.13	Injection valve power stage diagnosis	2067
7.2.14	Injector test mode	2068
7.2.15	Crash signal reaction of injection driver	2069
7.2.16	Time synchronous tasks (1s)	2071
7.2.17	Subroutines	2072
7.2.18	ACTION_INJR_IgnUpdate	2089
7.3	Transfer to basic software for injection (Appl. Inc.)	2090
7.4	Restart function	2094

7.4.1	FMSP_M7003	2094
7.5	Ambient pressure correction at start	2099
7.6	Cold post start correction	2100
7.6.1	FMSP_M7009	2101
7.7	Warm up correction	2109
7.7.1	FMSP_M700A	2110
7.8	Injection phase for homogeneous mode - 1. pulse	2122
7.8.1	Definition of the injection range	2123
7.8.2	Injection phasing at start	2125
7.8.3	Injection phasing out of start	2126
7.9	Injection phase for homogeneous mode - 2. pulse	2130
7.10	Injection phase for homogeneous mode - 3. pulse	2133
7.11	Injection phase for homogeneous /stratified mode	2136
7.12	Injection phase for stratified mode - 1. pulse	2140
7.13	Injection phase for stratified mode - 2. pulse	2142
7.14	Injection phase for stratified mode - 3. pulse	2144
7.15	Injection phase (Appl. Inc.)	2146
7.15.1	Calculation of pulse delay times for stratified combustion mode	2147
7.15.2	Calculation of injection phasing	2149
7.16	Calculation of mass fuel flow setpoint	2151
7.17	Homogeneous catalyst heating with multiple injection 1. pulse	2154
7.17.1	Catalyst heating after start	2155
7.17.2	Catalyst heating for desulfation	2157
7.18	Homogeneous catalyst heating with multiple injection 2. pulse	2159
7.18.1	After start catalyst heating	2161
7.18.2	Desulfation catalyst heating	2162
7.19	Fuel mass split up for catalyst heating	2164
7.19.1	After start catalyst heating	2166
7.19.2	Desulfation catalyst heating	2167
7.20	Lambda setpoint for catalyst heating	2169
7.20.1	After start catalyst heating	2171
7.20.2	Low load catalyst heating	2175
7.20.3	Desulfation catalyst heating	2176
7.21	Fuel mass setpoint of post injection for catalyst heating	2179
7.21.1	After start catalyst heating	2181
7.21.2	Low load catalyst heating	2183
7.21.3	Injection time of post injection	2185
7.22	Injection phase of post injection for catalyst heating	2188
7.22.1	Post injection for after start catalyst heating	2189
7.22.2	Post injection for low load catalyst heating	2191
7.22.3	Setpoint calculation for the INJR aggregate	2192

7.23	Catalyst overheating prevention	2195
7.23.1	Maximal selection between model or sensor based temperatur downstream the precatalyst	2197
7.23.2	Activation and Deactivation of the Controller	2197
7.23.3	Controller Equations	2197
7.23.4	Calculation of LAMB_COP (Resulting lambda request)	2198
7.24	Injection pressure correction - HOM 1. pulse	2200
7.25	Injection pressure correction for multiple injection - HOM 2. pulse	2204
7.26	Injection pressure correction for multiple injection - HOM 3. pulse	2208
7.27	Injection pressure correction for multiple injection - S 1. pulse	2212
7.28	Injection pressure correction for multiple injection - S 2. pulse	2216
7.29	Injection pressure correction for multiple injection - S 3. pulse	2220
7.30	Fuel temperature correction	2224
7.31	Compensation of temperature influence on the injector needle lift	2226
7.32	Compensation of fuel pressure influence on the injector needle lift	2228
7.32.1	SUBFUNCTION: Subsystem	2229
7.33	Compensation of the injection duty cycle on the injector needle lift	2230
7.33.1	SUBFUNCTION: operate	2232
7.34	Correction of injection via application system	2233
7.34.1	Global application system/service tool intervention	2239
7.34.2	Cylinder selective injection time correction - multiplicative	2239
7.34.3	Cylinder selective injection time correction - additive	2239
7.35	Piezo capacity temperature determination	2241
7.35.1	SUBFUNCTION: SIG_MNG	2246
7.35.2	Initialization	2246
7.35.3	Plausibility check of engine off time and calculation of substitute value for TEMP_CAPA_IV	2247
7.35.4	Calculation of filtered capacity, capacity offset and stack temperature	2250
7.35.5	Handling of nonvolatile memory	2257
7.36	Injector needle lift adjustment	2260
7.36.1	Cylinder individual adjustment of the energy level	2264
7.36.2	Selection of injector energy range	2269
7.37	Injector needle lift control	2277
7.37.1	Controller concept overview	2280
7.38	Injector needle lift control (Appl. Inc.)	2289
7.38.1	Nonvolatile memory operations	2291
7.38.2	Initialization at reset and first valid tooth	2291
7.38.3	Calculation at engine stop to engine run	2292
7.38.4	Calculation of additive energy correction	2292
7.38.5	External energy setpoint for energy controller	2294
7.39	Cylinder shut off	2295
7.39.1	Static fuel shut off	2297
7.39.2	Dynamic fuel shut off	2299