

Engine Management System
PSA DV6C J3J4
(PR2)
Specification

Transmittal, reproduction, dissemination and/or editing of this document as well as utilisation of its contents and communication thereof to others without expressed authorisation are prohibited. Offenders will be held liable for payment of damages. All rights created by patent grant or registration of a utility model or design patent are reserved.

Customer: PSA
Software Version: PR2B00
Date: 2014-05-27
Document Key: XXXXXXXXXXXX SPE 000 AA

Specification to customer

Diese Information ist lediglich eine technische Beschreibung des Produktes. Sie stellt keine Beschaffenheits- oder Haltbarkeitsgarantie im Sinne des Paragraphen 443 BGB dar.

This information is exclusively a technical description of the products. It is not meant or intends to be a special guarantee for a particular quality or durability with regard to section 443 BGB (German Civil Code).


Project: PSA DV6C J3J4 (PR2)

Engineering change Master ECM: -

Customer: PSA

	Name	Department	Phone	Date	Sign
Designed by	Fodor, Elena	P ES SYS CSW CSA TSR	+40256253493	2014-05-27	
Released by	Fodor, Elena	P ES SYS CSW CSA TSR	+40256253493	2014-05-27	

Transmittal, reproduction, dissemination and/or editing of this document as well as utilisation of its contents and communication thereof to others without expressed authorisation are prohibited. Offenders will be held liable for payment of damages. All rights created by patent grant or registration of a utility model or design patent are reserved.

Released by Fodor, Elena		Date 2014-05-27	File PR2B00
	Baseline PR2B00	Project PSA DV6C J3J4 (PR2)	
	Document key XXXXXXXXXX SPE 000 AA	Pages Page 1 of 8306	
Timisoara ()	Copyright (C) Continental AG, 2007		A4: 2007-11

Specification to customer

Version history

Document Version	Previous Version	Change Description(including number)
AA	AA	-

Transmittal, reproduction, dissemination and/or editing of this document as well as utilisation of its contents and communication thereof to others without expressed authorisation are prohibited. Offenders will be held liable for payment of damages. All rights created by patent grant or registration of a utility model or design patent are reserved.


Released by Fodor, Elena	Date 2014-05-27	File PR2B00
	Baseline PR2B00	Project PSA DV6C J3J4 (PR2)
	Document key XXXXXXXXXX SPE 000 AA	Pages Page 2 of 8306
Timisoara ()	Copyright (C) Continental AG, 2007	A4: 2007-11


Table of Contents

0 - Basic SW General Operation		549
0.1	Non volatile data management general	550
0.1.1	Introduction	550
0.1.2	Abbreviations and terms	550
0.1.3	General description	551
0.1.4	NVMY system events	551
0.1.5	Hardware constraints	551
0.1.6	Non Volatile Memory - Mechanisms for Data initialization	552
0.1.7	Write "on fly" request	554
0.1.8	Read for Diag request	554
0.1.9	NVMY status check	554
0.1.10	NVMY diagnostics	555
0.1.11	Channels description	555
0.1.12	Definition of variables managed by NVMY	557
0.2	Non volatile data management configuration	558
0.2.1	Hardware device	558
0.2.2	Supervisor recurrency	558
0.2.3	SW version detection	558
0.2.4	Key-on detection during power-latch phase	559
0.2.5	NVMY diagnostics	559
0.2.6	Channels grouping for initialisation	559
0.2.7	Tuning Initialisation	561
0.3	Non volatile data management implementation	563
0.3.1	Export Actions	563
0.3.2	Introduction	563
0.3.3	Abbreviations and terms	563
0.3.4	General description	564
0.3.5	NVMY system events	564
0.3.6	Hardware constraints	564
0.3.7	Non Volatile Memory - Mechanisms for Data initialization	565
0.3.8	Write "on fly" request	566
0.3.9	Read for Diag request	566
0.3.10	NVMY status check	566
0.3.11	NVMY diagnostics	566
0.3.12	Channels description	566
0.3.13	Data encryption/decryption	567
0.3.14	Definition of variables managed by NVMY	567
0.4	Customer reprogramming	569
0.4.1	Introduction	569
0.4.2	General description	569
0.4.3	Communication between reprogramming Tool and ECU	570
0.4.4	Functional memory layout	570
0.4.5	Security mechanisms	573
0.4.6	Reprogramming procedure activation	574
0.4.7	Reprogramming of the Customer Boot-SW	575
0.4.8	Reprogramming states	577
0.4.9	Reprogramming Status Word definition	578

0.5	Customer reprogramming (Appl. Inc.)	580
0.5.1	Customer reprogramming general configuration	580
0.5.2	Generic Customer reprogramming configuration	581
0.5.3	Software download reprogramming configuration	584
0.6	ECU reprogramming - Software specification	585
0.6.1	Introduction	585
0.6.2	References	585
0.6.3	Principle	585
0.6.4	Reprogramming Procedure	586
0.6.5	StartUp of SW ECU	587
0.6.6	Tokens and variables used during customer reprogramming.	587
0.7	Operating system general overview	590
0.7.1	FAST UPDATE	590
0.8	Checksum calculation	591
0.9	Checksum calculation (Appl. Inc.)	593
0.9.1	Checksum configuration	593
0.9.2	CVN computation	594
0.10	Cyclic redundancy check calculation algorithm	596
0.10.1	General description	596
0.10.2	Lookup table algorithm	596
0.10.3	CRC32 algorithm	597
0.11	CPU measurement	598
0.12	Bus off handler	603
0.12.1	Introduction	603
0.12.2	General Functional Description	603
0.12.3	Required Services	605
0.12.4	Configuration	605
0.13	ECU warm reset detection (Appl. Inc.)	607
0.13.1	Reset saved environment data	609
0.13.2	Store project specific data at reset	610
0.13.3	Configuration of debug monitoring	611
0.14	ECU warm reset detection	613
0.14.1	Monitoring of Debug Informations from DBG-Driver	616
0.14.2	Monitoring of Debug Informations from ECM3	620

1 - General 621

1.1	ENTE General	622
1.1.1	General Description	622
1.1.2	Architecture Overview	622
1.1.3	Description of the functions	622
1.2	System overview and description	624
1.2.1	System overview	624
1.2.2	System schematic for DV6C PSA applications	625
1.2.3	Application	625
1.2.4	Basic System Definitions	628

Released by Fodor, Elena		Date 2014-05-27	File N/A
	Baseline PR2B00	Project PSA DV6C J3J4 (PR2)	
	Document key XXXXXXXXXX SPE 000 AA	Pages Page 4 of 8306	
Timisoara ()	Copyright (C) Continental AG, 2007		A4: 2007-11

1.3	Nomenclature of the used data names and abbreviations	630
1.3.1	Nomenclature	630
1.3.2	List of used keywords	631
1.3.3	Naming Convention	633
1.4	Pin configuration of the connector (Appl. Inc.)	635
1.4.1	Analog Inputs	635
1.4.2	Logic Inputs	637
1.4.3	Frequency Inputs	637
1.4.4	Logic Outputs	638
1.4.5	Frequency Outputs	638
1.5	SYCF Configuration data	639
1.6	AIRT General	642
1.6.1	Air temperature sensor acquisition	642
1.6.2	Air temperature sensor diagnosis	642
1.6.3	Air temperature plausibility diagnosis	642
1.7	CBMD General	643
1.7.1	General Description	643
1.7.2	Architecture overview	643
1.8	ENSD General	650
1.8.1	General Description	650
1.8.2	Short description of the containing functions	651
1.9	ERRM General	654
1.10	EXTD General	656
1.10.1	Exhaust gas temperature sensor acquisition	656
1.10.2	Exhaust gas temperature sensor diagnosis	656
1.10.3	Exhaust gas temperature plausibility diagnosis	657
1.11	GEOL General	658
1.11.1	General Description	658
1.11.2	Architecture Overview	658
1.11.3	Description of the functions of the aftersale test routine package	659
1.12	F MSP General	661
1.12.1	General Description	661
1.12.2	Architecture overview	661
1.13	FUTL General	667
1.13.1	Architecture Overview	667
1.13.2	Description of the containing functions	667
1.14	MISF General	668
1.14.1	General Description	668
1.14.2	Architecture Overview	668
1.14.3	Description of the functions	668
1.15	PWSL General	669
1.15.1	General information	670
1.16	DGNC General	671
1.17	INJP General	674
1.17.1	General Description	674

1.17.2	Architecture overview:	674
1.18	FARM General	678
1.18.1	General Description	678
1.18.2	Architecture Overview	678
1.19	GLOW General	679
1.20	AIRT Configuration data	680
1.20.1	Local configuration data	680
1.21	CBMD Configuration data	681
1.21.1	Global Configuration Data	682
1.21.2	Local Configuration data	683
1.22	FMSP Configuration data	684
1.22.1	Global Configuration Data	684
1.22.2	Local Configuration data	685
1.23	INJR Configuration data	687
1.23.1	Global Configuration Data	689
1.23.2	Local Configuration data	689
1.24	EXTD Configuration data	692
1.24.1	Local configuration data	692
1.25	ENSD Configuration data	693
1.25.1	Global configuration data	695
1.25.2	Local configuration data	695
1.26	ENSD interface adaptation module	700
1.27	PWSL Configuration data	701
1.28	PWSL Configuration data (prj)	709
1.29	ERRM Configuration data	710
1.29.1	Global configuration data	710
1.29.2	Local configuration data	710
1.29.3	FARM configuration Excel sheets	714
1.30	EGCP Configuration data	716
1.30.1	Global configuration data	717
1.30.2	Local configuration data	717
1.31	EGCP stub module	720
1.32	FUTL Configuration data	722
1.33	FUSL Configuration data	723
1.33.1	Global Configuration Data	723
1.33.2	Local Configuration data	723
1.34	Variant coding	725
1.34.1	Variant coding selection	728
1.34.2	Generic variant coding definition	731
1.34.3	System configuration supported	733
1.35	Variant coding (Appl. Inc.)	734
1.35.1	Vehicle configuration (calibratable configuration)	739

1.35.2	Vehicle configuration from variant coding	740
1.36	Library of non-native MATRIXx blocks	742
1.36.1	DS - control structure	743
1.36.2	PI-Controller Limited Extended	747
1.37	Block diagram symbols	765
1.38	Initialization of variables from non implemented functions	772
1.38.1	Variant Coding /configuration	792
1.38.2	Particulate Filter	792
1.38.3	Inputs & Outputs	792
1.38.4	Input to misfiring detection & Cylinder Balancing	792
1.38.5	CAN data	793
1.38.6	End of line	795
1.38.7	After sales	796
1.38.8	Input to Limp-Home	796
1.38.9	Input to Engine Speed Limitation	796
1.38.10	Vehicle Speed Control and limiter	797
1.38.11	Thermomanagement	797
1.38.12	Engine stop function	797
1.38.13	Airpath variables	797
1.38.14	Conversion factor from mg/stk to kg/h	797
1.38.15	Torque	797
1.38.16	Injection	798
1.38.17	Oil variables	798
1.38.18	Communication	798
1.38.19	Others	798
1.38.20	GLOW	799
1.38.21	Starter	800
1.38.22	LV_ERR_xxx	800
1.38.23	Statistical data	800
1.38.24	Power Supply	800
1.38.25	FUSL	800
1.38.26	Anti air suction	801
1.38.27	ENSC	801
1.38.28	ENSD	801
1.38.29	Stop/Start	801
1.38.30	ISTARS configuration	801
1.38.31	Immobilizer :	802
1.38.32	Freeze frame re-written flag computation	803
1.38.33	LV_DC definition for compatibility (diagnoses migration phase)	803
1.39	OBDC Configuration data	807
1.39.1	NC_STATE_OBD_SRV - EOBD SERVICES	808
1.39.2	NC_STATE_OBD_CONF - EOBD CONFIGURATION	808
1.39.3	NLC_STATE_PRJ_SPC_CAL - Project specific calibration data	809
1.39.4	NC_STATE_PID_13_PSN_LS - Configuration of oxygen sensors (2 Banks 4 Sensors)	809
1.39.5	STATE_PSN_LS_SAE - Position of oxygen sensors for OBD (2 Banks 4 Sensors)	810
1.39.6	NC_STATE_PID_1D_PSN_LS - Configuration of oxygen sensors (4 Banks 2 Sensors)	810
1.39.7	STATE_PSN_LS_1_SAE - Position of oxygen sensors for OBD (4 Banks 2 Sensors)	810
1.39.8	NLC_STATE_VAR_SAP - Configuration of secondary air pump	811
1.39.9	STATE_VAR_SAP_SAE - Position of Secondary Air Pump for OBD	811
1.39.10	NLC_STATE_EVAP - Configuration of EVAP Monitor	811
1.39.11	STATE_EVAP_SAE - Value for EVAP Monitor for OBD	811

1.40	MCPC Configuration data	813
1.40.1	Configuration Guide	814
1.41	HVAC Configuration data	818
1.41.1	Local configuration data	818
1.42	INJP Configuration data	820
1.42.1	Global Configuration Data	820
1.42.2	Local Configuration data	820
1.43	FARM Configuration data	822
1.44	FUSP Configuration data	823
1.45	OSYM General	824
1.46	INTC General	825
1.46.1	General information:	825
1.46.2	Signal flow diagram:	825
1.46.3	Description:	825
1.46.4	Normative reference for LIN	826
1.47	ISO Network layer general	827
1.47.1	Introduction	827
1.47.2	Referenced Documents	827
1.47.3	General Overview	827
1.47.4	General Functional Description	827
1.47.5	Services	828
1.47.6	Dynamic Behaviour	828
1.47.7	Specifics	828
1.47.8	Constraints	828
1.48	CPU load measurement general	829
1.49	HVAC General	830
1.50	VHSC Configuration data	831
1.51	ECM3 Configuration data (prj)	832
1.51.1	Value assignment for configuration data	834
1.51.2	Configuration data dependent on number of PFM inspection points	837
1.51.3	Configuration data dependent on MU mode	839
1.52	ECM2 Configuration data	841
1.53	MCPC General	844
1.53.1	Introduction	844
1.53.2	Reference Documents	844
1.53.3	General Function Description	844
1.53.4	XCP commands	844
1.53.5	Requirements for Calibration Data Access	844
1.53.6	Requirements for Data Acquisition	846
1.53.7	Communication Model	847
1.54	Interaction layer general	849
1.55	Vehicle identification number	850
1.55.1	ACTION_SYCF_WrChnVinCur	855
1.55.2	ACTION_SYCF_WrChnVinOrg	855

1.55.3	ACTION_SYCF_ReadVinCur	856
1.55.4	ACTION_SYCF_ReadVinOrg	856
1.55.5	ACTION_SYCF_StateWrChnVinCur	856
1.55.6	ACTION_SYCF_StateWrChnVinOrg	856
1.55.7	ACTION_SYCF_VInClcProduct	856
1.55.8	ACTION_SYCF_ChkVinVld	857
1.55.9	ACTION_SYCF_CpyVinCurToVinOrg	858
1.55.10	ACTION_SYCF_VinChkCdn	858

2 - Basic SW Inputs and Outputs 859

2.1	Acquisition of air mass flow for frequency air mass sensor	860
2.1.1	Initialization	863
2.1.2	OPM	864
2.2	Manifold air pressure acquisition	879
2.3	Acquisition of after relay battery voltage	881
2.3.1	Initialization at reset	883
2.3.2	Formula section	886
2.3.3	Formula section	888
2.3.4	Operate 5ms	889
2.4	Acquisition of after key battery voltage	890
2.4.1	Initialization at reset	892
2.4.2	Operation at 1MS	896
2.4.3	Calculation of V_IGK_MES and V_IGK_ST_MES	898
2.5	Acquisition of vehicle speed signal	901
2.6	Fuel tank level for CAN inputs	904
2.7	Acquisition of wake up signal	905
2.7.1	Initialisation at reset	908
2.7.2	LV_WKUL_BAS: Basic wake-up state determination	914
2.7.3	Operate at 10ms	922
2.7.4	Detailed description for Action: ACTION_PWSL_GetLvWkulPoll	925
2.8	Key position determination	934
2.8.1	Ignition key/key start position state acquisition present or not	937
2.8.2	Basic Key and Key start position determination	942
2.8.3	Acquisition from analogic or digital input	951
2.8.4	Detailed description for Action: ACTION_PWSL_SetLvlgkBas	952
2.8.5	Detailed description for Action: ACTION_PWSL_GetLvlgkPoll	953
2.9	Analog input trim	961
2.10	INJR - Requirements to infrastructure interface	966
2.11	Engine speed (Tacho) output	967
2.12	Definition and configuration of output diagnosis	969
2.13	General management and configuration of SPI bus diagnosis	972
2.14	INSY - Requirements to infrastructure interface (AMP)	973

2.15	Injector multiple power stage management	975
2.15.1	Export Actions	975
2.15.2	Initialization tasks - time synchronous tasks	977
2.15.3	Initialization tasks - event tasks	979
2.15.4	Shutdown routine	979
2.16	H-bridge driver	981
2.16.1	H-Bridge Driver Function	983
2.17	H-bridge driver (Appl. Inc.)	985
2.18	VHSC - Requirements to infrastructure interface	986
2.18.1	ACTION_INFR_GetVCruSens	986
2.19	INSY - Requirements to infrastructure interface	987
2.20	BRSY - Requirements to infrastructure interface	989
2.21	EGPR - Requirements to infrastructure interface	991
2.22	EGPR - Requirements to infrastructure interface (DIP_PF)	993
2.23	THRO - Requirements to infrastructure interface (ETC)	994
2.23.1	Throttle h-bridge diagnosis	998
2.23.2	Throttle h-bridge activation/deactivation request	998
2.23.3	Port flap H-bridge diagnostics on SPI	999
2.24	ECM2 - Requirements to infrastructure interface	1002
2.24.1	ACTION_INFR_GetPinBlSMon	1007
2.24.2	ACTION_INFR_GetPinBtsMon	1008
2.24.3	ACTION_INFR_GetTSegSwMon	1008
2.24.4	ACTION_INFR_ResetTSegSwMon	1009
2.24.5	ACTION_INFR_GetVPvsMon	1010
2.24.6	ACTION_INFR_GetVccPvsMon	1011
2.24.7	ACTION_INFR_GetVccPvs2Mon	1011
2.24.8	ACTION_INFR_GetPwmPvsMon	1012
2.24.9	ACTION_INFR_GetVpPfuMon	1013
2.24.10	ACTION_INFR_GetVpTfuMon	1013
2.24.11	ACTION_INFR_GetVplgkMon	1014
2.24.12	ACTION_INFR_GetCluSwi25Mon	1014
2.24.13	ACTION_INFR_GetCluSwi75Mon	1015
2.24.14	ACTION_INFR_GetVCluPsnMon	1015
2.24.15	ACTION_INFR_GetPwmCluPsnMon	1016
2.24.16	ACTION_INFR_GetPwmNeutGearMon	1016
2.24.17	ACTION_INFR_GetVpNeutGearMon	1017
2.24.18	ACTION_INFR_GetDrivReqStMon	1018
2.24.19	ACTION_INFR_GetVpPtoMon	1018
2.24.20	ACTION_INFR_SetCrankMon	1019
2.24.21	ACTION_INFR_GetEIDiagInhCrankMon	1019
2.24.22	ACTION_INFR_ECM2FaultReaction	1020
2.24.23	ACTION_INFR_GetVpTceMon	1021
2.24.24	ACTION_INFR_GetStrHighSideVoltageMon	1021
2.24.25	ACTION_INFR_GetPwmNeutGearSensorsMon	1022
2.24.26	ACTION_INFR_GetVCruSensMon	1023
2.25	ECM3 - Requirements to infrastructure interface	1024
2.25.1	G44 Communication checksum monitoring	1031
2.25.2	G45 Parity-bit checking	1031

2.25.3	G48 Requirements to IRS actions for switch-off path check	1032
2.25.4	G53 Requirements to infrastructure interface for acquisition of values of A/D conversions on MC	1033
2.25.5	G61 Requirements to infrastructure interface for triggering a communication with the MU	1033
2.25.6	G46 Complement of configuration data	1034
2.25.7	G50 Requirements to infrastructure interface for stack check	1034
2.25.8	G58 Requirements to infrastructure interface for start of MU readiness check . . .	1035
2.25.9	G59 Requirements to infrastructure interface for evaluation of MU readiness check	1035
2.25.10	G67 Requirements to infrastructure interface for power-up detection	1036
2.25.11	G68 Requirements to infrastructure interface for SW mode detection	1037
2.25.12	Requirements to infrastructure interface for Standard ROM check on MC	1037
2.25.13	Requirements to infrastructure interface for Standard RAM check on MC	1037
2.26	EGCP - Requirements to infrastructure interface	1039
2.26.1	Control of the up- and downstream LSH Driver	1045
2.26.2	Exhaust gas composition - Requirements for up- and downstream lambda sensor voltage	1046
2.26.3	Signal acquisition for cylinder individual lambda control (CILC)	1047
2.26.4	Upstream oxygen sensor heater OBDI diagnosis	1048
2.26.5	Wide Range Air-Fuel sensor interface (BSW)	1050
2.26.6	Up and downstream oxygen sensor internal resistance determination.	1051
2.26.7	Acquisition of signal voltage and lambda model values for the Heater Coupling Diagnosis	1052
2.27	O2 sensor (lin, up) SPI interface BSW	1054
2.27.1	Acquire raw data from the Infrastructure (BSW)	1055
2.27.2	Description of the interaction between infrastructure and the WRAF controller	1056
2.27.3	BSW Description	1057
2.28	O2 sensor signal acquisition general	1066
2.29	EGRC - Requirements to infrastructure interface	1068
2.30	ECOP - Requirements to infrastructure interface for warm RST detection	1070
2.31	ENTE - Requirements to infrastructure interface (TCE)	1071
2.32	ENTE - Requirements to infrastructure interface (VEL CFA)	1072
2.32.1	CFA command	1072
2.32.2	CFA diagnosis	1073
2.33	ENLU - Requirements to infrastructure interface	1075
2.33.1	Export Actions	1075
2.33.2	Export Actions	1075
2.34	ENSD - Requirements to infrastructure interface	1078
2.34.1	ACTION_INFR_GetToothPer	1092
2.34.2	ACTION_INFR_SetTCrkSensDly	1093
2.34.3	ACTION_INFR_SetWindow	1093
2.34.4	ACTION_INFR_SetFacAcCrk	1094
2.34.5	ACTION_INFR_SetPsnEngCrkCor	1094
2.34.6	ACTION_INFR_GetCrkAcqErr	1095
2.34.7	ACTION_INFR_GetEPOErr	1095
2.34.8	ACTION_INFR_SetCrkAngDly	1097
2.34.9	ACTION_INFR_GetCamEdgePer	1097
2.34.10	ACTION_INFR_GetCamEdgeldx	1098
2.34.11	ACTION_INFR_GetCamEdgePosition	1098

2.34.12	ACTION_INFR_GetCamEdgeIdlePos	1099
2.34.13	ACTION_INFR_GetCamEdgeCtr	1099
2.34.14	ACTION_INFR_GetCamState	1100
2.34.15	ACTION_INFR_GetCamAcqErr	1101
2.34.16	ACTION_INFR_SetDywCamSyn	1101
2.34.17	ACTION_INFR_SetDywCamCrkSyn	1102
2.34.18	ACTION_INFR_SetCamRatioFac	1102
2.34.19	ACTION_INFR_SetCtrGapGapMax	1103
2.34.20	ACTION_INFR_GetCamEdgeType	1103
2.34.21	ACTION_INFR_SetPreSyncEngPos	1104
2.34.22	ACTION_INFR_EnableEventSt	1105
2.34.23	ACTION_INFR_SetMode	1105
2.34.24	ACTION_INFR_GetState	1108
2.34.25	ACTION_INFR_GetEnginePsn	1108
2.34.26	ACTION_INFR_CohPsnSeg	1109
2.34.27	ACTION_INFR_GetPsnEngSynCamMin	1110
2.34.28	ACTION_INFR_GetPsnEngSynCamMax	1111
2.34.29	ACTION_INFR_GetSegNr	1112
2.34.30	ACTION_INFR_CohSegNr	1113
2.34.31	ACTION_INFR_SetCamStart	1113
2.34.32	ACTION_INFR_GetTSeg	1114
2.34.33	ACTION_INFR_GetTSegEr	1115
2.34.34	ACTION_INFR_GetTSegHalf	1115
2.34.35	ACTION_INFR_GetTCrkWin	1116
2.34.36	ACTION_INFR_SetCamLimpEdgeOff	1116
2.34.37	ACTION_INFR_GetCrkState	1117
2.34.38	ACTION_INFR_GetVMcpsDiagBas	1118
2.34.39	ACTION_INFR_GetCrkCtr	1118
2.34.40	ACTION_INFR_SetCtrLowNGapMax	1119
2.34.41	ACTION_INFR_SetNCamCrkSynEnaMin	1120
2.34.42	ACTION_INFR_SetPreInjPosWoutCam	1120
2.34.43	ACTION_INFR_SetSegNrNvmy	1121
2.34.44	ACTION_INFR_SetCrkCtrNvmy	1122
2.34.45	ACTION_INFR_GetSynWoutCamData	1122
2.34.46	ACTION_INFR_SetTCrkShoLevel	1123
2.34.47	ACTION_INFR_SetNMinStst	1123
2.34.48	ACTION_INFR_SetCrkShoLevelDet	1124
2.34.49	ACTION_INFR_SetStstState	1124
2.34.50	ACTION_INFR_SetCrkSimToothState	1125
2.34.51	ACTION_INFR_SetSyncReq	1125
2.34.52	ACTION_INFR_GetCrkCtrBack	1126
2.34.53	ACTION_INFR_GetEngStopStst	1127
2.34.54	ACTION_INFR_GetFirstToothStst	1127
2.34.55	ACTION_INFR_GetSyncReq	1128
2.34.56	ACTION_INFR_GetCrkShoLevelErr	1128
2.34.57	ACTION_INFR_GetGapPos	1129
2.34.58	ACTION_INFR_GetSegPos	1129
2.34.59	ACTION_INFR_SyncCamCrkTrig	1129
2.34.60	ACTION_INFR_SigSegTrig	1130
2.34.61	ACTION_INFR_GapTrig	1130
2.35	ENSD - Requirements to infrastructure interface (Appl. Inc.)	1131
2.35.1	Requirements for ACTION_INFR_GetTToothBuf:	1132
2.35.2	Requirements for ACTION_INFR_GetToothBufEna:	1132
2.36	ENSS - Requirements to infrastructure interface	1133
2.36.1	ACTION_INFR_SetStarterRelay	1141

2.36.2	ACTION_INFR_ResetStarterRelay	1141
2.36.3	ACTION_INFR_SetLbdStrLowSide	1142
2.36.4	ACTION_INFR_SetLbdStrHighSide	1142
2.36.5	ACTION_INFR_SetCrkState	1143
2.36.6	ACTION_INFR_GetStrLowSideVoltage	1143
2.36.7	ACTION_INFR_GetStrHighSideVoltage	1143
2.36.8	ACTION_INFR_GetStrLowSideFeedBack	1144
2.36.9	ACTION_INFR_GetStrHighSideFeedBack	1144
2.36.10	ACTION_INFR_GetStatusStr	1145
2.36.11	ACTION_INFR_GetEIDiagStr_1()	1145
2.36.12	ACTION_INFR_GetEIDiagStr_2()	1146
2.36.13	ACTION_INFR_GetEIDiagCrkState()	1147
2.37	ENSS - Requirements to infrastructure interface	1149
2.37.1	Export Actions	1149
2.37.2	ACTION_INFR_SetIPRDiagEna	1150
2.37.3	ACTION_INFR_SetIPRDiagDis	1150
2.38	ENSS - Requirements to infrastructure interface (analogue)	1151
2.39	ERRM - Requirements to infrastructure interface	1152
2.40	EXTD - Requirements to infrastructure interface	1153
2.40.1	ACTION_INFR_GetVpTeg	1153
2.41	AIRT - Requirements to infrastructure interface	1154
2.42	CHRA - Requirements to infrastructure interface (PNM ACR)	1155
2.42.1	Bpa h-bridge diagnosis	1159
2.42.2	Bpa h-bridge activation/deactivation request	1160
2.42.3	Boost pressure actuator H-bridge diagnostics on SPI	1161
2.43	DRPD - Requirements to infrastructure interface	1164
2.43.1	Export Actions	1164
2.43.2	Export Actions	1164
2.44	DRPD - Requirements to infrastructure interface (kick down)	1166
2.45	STSY - Requirements to infrastructure interface	1167
2.45.1	Export Actions	1167
2.45.2	Export Actions	1167
2.45.3	Power steering analog pressure sensor : voltage acquisition	1167
2.46	PWSL - Requirements to infrastructure interface	1169
2.46.1	Detailed description for Action: ACTION_INFR_GetVlgkStartBas	1174
2.46.2	Detailed description for Action: ACTION_INFR_GetVlgkBas	1175
2.46.3	Detailed description for Action: ACTION_INFR_GetVccBas	1176
2.46.4	Detailed description for Action: ACTION_INFR_GetVWkulBas	1177
2.46.5	Detailed description for Action: ACTION_INFR_GetVRlyMainBas	1178
2.46.6	Detailed description for Action: ACTION_INFR_GetEIDiagRlyMain	1179
2.46.7	Detailed description for Action: ACTION_INFR_EnableRlyMain	1181
2.46.8	Detailed description for Action: ACTION_INFR_DisableRlyMain	1181
2.46.9	Detailed description for Action: ACTION_INFR_GetDiglgkStartBas	1182
2.46.10	Detailed description for Action: ACTION_INFR_GetDiglgkBas	1183
2.46.11	Detailed description for Action: ACTION_INFR_SetLbdRlyMain	1184
2.46.12	Detailed description for Action: ACTION_INFR_GetVlgkBasPoll	1185
2.46.13	Detailed description for Action: ACTION_INFR_GetVPwrRlyBas	1186
2.46.14	Detailed description for Action: ACTION_INFR_GetEIDiagPwrRly	1186

2.46.15	Detailed description for Action: ACTION_INFR_EnablePwrRly	1189
2.46.16	Detailed description for Action: ACTION_INFR_DisablePwrRly	1190
2.46.17	Detailed description for Action: ACTION_INFR_GetDigWkulBas	1191
2.46.18	Detailed description for Action: ACTION_INFR_GetVWkulBasPoll	1192
2.46.19	Detailed description for Action: ACTION_INFR_GetLvEcuVar	1193
2.46.20	Detailed description for Action: ACTION_INFR_GetDiagVcc	1193
2.47	PWSL - Requirements to infrastructure interface (ECU)	1196
2.47.1	ACTION_INFR_GetVBatTempBas	1196
2.47.2	ACTION_INFR_GetVBatCurBas	1196
2.48	FUSL - Requirements to infrastructure interface	1198
2.48.1	ACTION_INFR_GetVpPfu	1198
2.49	FUSL - Requirements to infrastructure interface (PCV)	1199
2.49.1	ACTION_INFR_GetVpCfbPcv	1199
2.49.2	ACTION_INFR_GetEIDiagPcv	1200
2.49.3	ACTION_INFR_SetPwmPcv	1201
2.49.4	ACTION_INFR_SetFrqPwmPcv	1201
2.50	FUSL - Requirements to infrastructure interface (TFU)	1203
2.50.1	ACTION_INFR_GetVpTfu	1203
2.51	FUSL - Requirements to infrastructure interface (VCV)	1204
2.51.1	Current control of volume flow actuator	1205
2.51.2	Power stage diagnosis	1207
2.52	FUTL - Requirements to infrastructure interface	1208
2.52.1	Export Actions	1208
2.52.2	Power stage Command	1209
2.52.3	Power stage diagnosis	1209
2.53	FUTL - Requirements to infrastructure interface (water in fuel)	1211
2.53.1	Export Actions	1211
2.54	TRSM - Requirements to infrastructure interface	1212
2.54.1	Digital 75% Clutch Sensor	1213
2.54.2	Analogue Clutch Position Sensor	1213
2.54.3	PWM Clutch Position Sensor	1214
2.55	Acquisition of glowing diagnosis information	1215
2.55.1	Bit Request Validity Check	1219
2.55.2	Communication with Glow Device	1220
2.56	THRO - Requirements to infrastructure interface (bypass)	1225
2.56.1	ACTION_INFR_GetBypVp	1228
2.56.2	ACTION_INFR_GetEIDiagBypHbr	1228
2.56.3	ACTION_INFR_DisableBypHbr	1231
2.56.4	ACTION_INFR_EnableBypHbr	1231
2.56.5	ACTION_INFR_GetEIDiagByp	1232
2.56.6	ACTION_INFR_GetPwmBypMes	1233
2.56.7	ACTION_INFR_SetAngSpByp	1233
2.56.8	ACTION_INFR_SetCtlLimByp	1234
2.57	EGRA - Requirements to infrastructure interface	1236
2.57.1	EGR valve h-bridge diagnosis via status flag - SF mode	1240
2.57.2	EGR valve h-bridge activation/deactivation request	1241
2.57.3	EGR valve actuator diagnostic	1242
2.57.4	EGR valve H-bridge diagnostics on SPI	1243

2.58	EGRA - Requirements to infrastructure interface (EGR cooling valve)	1246
2.59	HVAC - Requirements to infrastructure interface	1248
2.59.1	Export Actions	1248
2.59.2	Export Actions	1249
2.59.3	Export Actions	1249
2.59.4	Activation of heater	1249
2.59.5	RTE valve	1250
2.59.6	Electrical diagnosis	1251
2.60	HVAC - Requirements to infrastructure interface (ACC RLY)	1253
2.60.1	ACTION_INFR_SetAccRly	1253
2.60.2	ACTION_INFR_GetEIDiagAccRly	1254
2.61	GLOW - Requirements to infrastructure interface	1256
2.61.1	Actuator power stage diagnosis	1257
2.61.2	Acquisition of signal from feedback line	1258
2.61.3	Feedback line diagnosis	1259
2.61.4	Definition of the signal form	1259
2.62	OSYM - Requirements to infrastructure interface	1260
2.63	ESVS - Requirements to infrastructure interface	1261
2.64	Crankshaft signal processing for CPDD (low layer)	1263
2.65	Crankshaft signal processing (low layer)	1264
2.65.1	CPU load, RAM, ROM optimization	1266
2.65.2	Crankshaft Synchronization	1267
2.65.3	Infrastructure description: Engine position state automat and state transition	1267
2.65.4	System requirements to sensor signal	1286
2.65.5	Hardware and HAL requirements	1286
2.66	Crankshaft signal processing (low layer) (Appl. Inc.)	1288
2.66.1	Last segment teeth durations buffer management (T_TOOTH_BUF_BAS)	1288
2.67	Camshaft signal processing (low layer)	1291
2.67.1	Infrastructure description	1293
2.67.2	Camshaft Self-Synchronization	1293
2.67.3	Definition of the sub function tasks	1297
2.67.4	Requirements to Infrastructure	1300
2.68	Engine position calculation (low layer)	1301
2.68.1	Calculation of PSN_ENG_CRK_BAS in standard mode	1302
2.68.2	Calculation of PSN_ENG_CRK_BAS in camshaft limp-home mode	1302
2.68.3	Engine position extrapolation between CRK tooth event in standart mode and in camshaft limp-home mode.	1303
2.68.4	Calculation of PSN_ENG_CAM_LIH_CRK_BAS	1305
2.68.5	Engine position extrapolation between CAM tooth event in crankshaft limp-home mode.	1306
2.68.6	Segment number calculation	1309
2.68.7	Engine position calculation in safe mode in stop/start mode	1310
2.69	Engine synchronization with camshaft/crankshaft signals (low layer)	1312
2.69.1	Infrastructure description : Camshaft/Crankshaft Synchronization	1314
2.69.2	Definition of the sub function tasks for Camshaft/Crankshaft Synchronization : Camshaft edge index determination function ()	1317
2.69.3	Definition of the sub function tasks for Camshaft/Crankshaft Synchronization : Cam/crk synchronization validation function ()	1329

2.69.4	Definition of the sub function tasks for Camshaft/Crankshaft Synchronization : Measurement of angular distance to active camshaft edge	1331
2.69.5	Definition of the sub function tasks for Camshaft/Crankshaft Synchronization : Measurement of angular distance from reference gap to active camshaft edge	1332
2.69.6	Engine Position Interface for Pre-Injection	1333
2.69.7	Definition of the sub function tasks for engine Position Interface for Pre-Injection : Pre-injection interface computation before Cam edge function ()	1335
2.69.8	Definition of the sub function tasks for engine Position Interface for Pre-Injection : Pre-injection interface computation after Cam edge function ()	1336
2.70	Engine synchronization without camshaft signal (low layer)	1338
2.71	Acquisition of battery current and temperature	1339
2.71.1	Acquisition of battery temperature	1340
2.71.2	Acquisition of battery current	1340
2.71.3	Long term filtering of battery current, intake air temperature	1341
2.72	TRSM - Requirements to infrastructure interface (neutral gear)	1342
2.72.1	PWM Neutral Gear Position Sensor	1342
2.73	Acquisition of after HPDI relay battery voltage	1344
2.73.1	Initialization at reset	1345
2.73.2	Operate 1ms	1349
2.73.3	Operate 10ms	1351

3 - AGGR adaptation modules 1354

3.1	AGGR adaptation: VHSC	1355
3.1.1	ACTION_INFR_GetPinCruSwitch	1355
3.2	AGGR adaptation: AIRT	1356
3.2.1	Calculation of TIA_MES_SAE	1356
3.3	AGGR adaptation: EGCP	1357
3.3.1	EGCP Outputs	1359
3.3.2	EGCP Inputs	1360
3.4	AGGR adaptation: ENTE	1365
3.4.1	ENTE Outputs	1365
3.4.2	ENTE Inputs	1366
3.5	AGGR adaptation: PWSL	1367
3.5.1	PWSL configuration - 10ms task	1369
3.5.2	PWSL configuration - 100ms task	1370
3.5.3	Data provided by PWSL aggregate - Affectation after PWSL calls	1371
3.5.4	Adaptation with old PWSL data - 1ms task	1372
3.6	AGGR adaptation: GEOL	1373
3.6.1	ACTION_GEOL_CusAirLoopTest	1375
3.7	AGGR adaptation: MFMA	1376
3.7.1	MFMA deactivation flag calculation:	1384
3.7.2	Renaming MFMA inputs and outputs:	1386
3.7.3	Exported actions:	1389
3.7.4	Action at powerlatch	1391
3.8	AGGR adaptation: FARM	1393

3.8.1	ACTION_FARM_GetPermission	1393
3.8.2	ACTION_FARM_ReqInit	1394

4 - System variables 1396

4.1	Engine speed calculation	1397
4.1.1	Predictive Engine Speed	1397
4.1.2	Basic Segment Time	1398
4.1.3	Additional Segment Times	1398
4.1.4	Segment Times related to engine roughness	1402
4.1.5	Segment Counter	1402
4.2	Coolant temperature	1404
4.2.1	Coolant Temperature Acquisition TCE_SENS_MES	1405
4.2.2	Coolant Temperature Coordination (substitute value for erroneous sensor)	1405
4.2.3	Calculation of TCE_SENS_ST	1406
4.2.4	Calculation of TCE_SENS_ST_DC	1407
4.3	Engine coolant temperature calculation at engine outlet (Appl. Inc.)	1409
4.3.1	Engine coolant temperature correction	1410
4.4	Engine coolant temperature calculation at engine outlet	1412
4.4.1	Engine coolant temperature correction	1412
4.4.2	Calculation of the initial TCE_ST	1413
4.4.3	Calculation of the initial TCE_ST_DC at the beginning of the new driving cycle	1413
4.5	Coolant temperature substitute model (Appl. Inc.)	1415
4.6	Coolant temperature substitute model	1417
4.7	Engine speed limit coordination	1423
4.7.1	Initialization in case of Reset	1428
4.7.2	Limit Coordinator	1429
4.8	Air mass flow variables with intake manifold model	1444
4.8.1	Calculating the Substitutional Value MAF_KGH_SUB	1446
4.8.2	Mass Airflow Acquisition MAF_KGH_MES_A[j] and MAF_KGH_MES	1447
4.8.3	Calculation of MAF_KGH_MES_SAE and MAF_KGH_SCA_MAX_SAE	1447
4.8.4	Air Mass Flow Coordination MAF_KGH_A[j] and MAF_KGH	1448
4.8.5	Moving mean value MAF_KGH_CUS_MMV for customer adaptation module	1451
4.8.6	Filtered value MAF_KGH_CUS_MMV_FIL for customer adaptation module	1452
4.8.7	Air Mass Flow Calculation MAF_A[j] and MAF	1452
4.8.8	Air Mass Flow Calculation MAF_MES_A[j] and MAF_MES	1454
4.8.9	Filter for Air Mass Flow	1455
4.9	Ambient pressure acquisition	1458
4.9.1	Acquisition of Ambient Pressure AMP_MES	1459
4.9.2	Coordination of Ambient Pressure AMP	1459
4.10	Vehicle speed	1461
4.11	Vehicle speed (Appl. Inc.)	1467
4.12	Distance counter	1469
4.13	Battery voltage	1472
4.13.1	Initialization at reset	1476

4.13.2	Formula section	1477
4.14	Manifold air pressure sensor variables	1484
4.14.1	Acquisition of RATIO_VP_MAP	1485
4.14.2	Calculation of RATIO_VP_MAP_FIL	1486
4.14.3	Coordination of pressure sensor values	1487
4.14.4	Calculation of MAP_MES_SAE and MAP_SCA_MAX_SAE	1488
4.15	Boost voltage	1490
4.16	Ignition key recognition	1491
4.16.1	Initialization at reset	1492
4.16.2	Operate 5ms : LV_IGK_FAST: Fast key position determination	1493
4.16.3	Operate 10ms : LV_IGK, LV_IGK_ST: Key and Key start position determination	1494
4.17	Fuel temperature	1496
4.17.1	Fuel Temperature Acquisition TFU_MES	1497
4.17.2	Fuel Temperature Coordination TFU	1497
4.18	Exhaust gas temperature sensors	1499
4.18.1	Acquisition of TEG-values with rate 20 ms	1500
4.18.2	Filtering of TEG-values sampled with rate 20 ms /Acquisition 100 ms	1501
4.18.3	Filtering of TEG-values sampled with rate 100 ms	1502
4.18.4	Coordination of exhaust gas temperatures TEG[i]	1503
4.19	Exhaust gas temperature sensors (Appl. Inc.)	1505
4.19.1	Configuration of individual Exhaust Gas Temperatures	1506
4.19.2	Calculation of Substitute Value TEG_SUB[i] of Sensor i	1507
4.20	Exhaust gas temperature downstream EGR cooling	1509
4.20.1	Acquisition of exhaust gas temperatures TEGR_OUT_MES[i]	1510
4.20.2	Exhaust gas temperature downstream EGR cooling Coordination TEGR_COOL_DOWN	1510
4.21	Differential pressure for particulate filter	1514
4.21.1	Differential pressure for Particulate Filter Acquisition DIP_PF_MES[j]	1515
4.21.2	Differential Pressure for Particulate Filter Coordination DIP_PF[j] and DIP_PF_MMV[j]	1517
4.22	ECU temperature	1520
4.22.1	ECU temperature acquisition TECU_MES	1521
4.22.2	ECU-temperature Coordination TECU	1521
4.23	Pedal value sensor variables	1523
4.23.1	Initialization	1529
4.23.2	DRRQ_M4008/OPM/GET_PERMISSION	1532
4.23.3	Gradient Limitation	1533
4.23.4	Filtration of PVS-voltage values	1534
4.23.5	Standardization of the pedal value	1534
4.23.6	Filtration of the PV_AV	1535
4.23.7	Freezing of pedal position during error prediction	1538
4.23.8	Value Selection	1539
4.24	Pedal value sensor error limitations	1545
4.24.1	INITIALISATIONS	1547
4.24.2	CALCULATION	1547
4.25	Kick down recognition /adaptation	1555
4.25.1	Kick down switch: Acquisition of VP_KD	1558

4.25.2	Kick down switch: Calculation of LV_KD	1558
4.26	Air conditioning pressure	1573
4.26.1	Sensor type configuration	1574
4.26.2	Acquisition of air conditioning pressure via analog sensor input	1575
4.26.3	Acquisiton of air conditioning pressure via frequential sensor input	1575
4.26.4	Acquisiton of air conditioning pressure via CAN	1576
4.26.5	Coordination of Air Conditioning Pressure ACP	1576
4.26.6	Medium pressure switch	1577
4.26.7	High pressure switch	1578
4.27	Fuel pressure	1579
4.27.1	Upcounting of buffers to collect sensor voltage	1581
4.27.2	Calculation of Fuel Pressure Variables : Calculation of measured Fuel Pressure PFU_MES /FUP_MES	1582
4.27.3	Calculation of Fuel Pressure Variables : Calculation of Fuel Pressure PFU /FUP	1583
4.27.4	Calculation of Fuel Pressure Variables : Calculation of filtered Fuel Pressure PFU /PFU_FIL	1584
4.27.5	Calculation of Fuel Pressure Variables : Calculation of maximal Fuel Pressure Difference V_PFU_DIF	1585
4.27.6	Calculation of Fuel Pressure Variables : Calculation of PFU_MES_SAE	1585
4.28	Neutral gear detection for manual shifted transmission	1587
4.28.1	Aquistion of neutral gear position signal	1588
4.28.2	Handling of neutral gear position signal - assign of LV_ANG_NEUT_GEAR	1588
4.29	O2 sensor (lin, up) SPI interface ASW - BSW	1590
4.30	O2 sensor (lin, up) SPI interface ASW - BSW (Appl. Inc.)	1594
4.31	O2 sensor (lin, up) element temperature determination	1596
4.32	O2 sensor (lin, up) element temperature determination (Appl. Inc.)	1615
4.33	O2 sensor (lin, up) basic signal processing	1617
4.33.1	EGCP_SIGCVLSL3	1619
4.34	Clutch switch	1638
4.34.1	Clutch switch acquisition LV_CLU_SWI	1638
4.35	Clutch position	1641
4.35.1	Clutch position acquisition CLU_POS	1642
4.35.2	Service tool interface for resetting the learnt compensation value	1644
4.35.3	Acquisition of PWM measurement value CLU_PSN_PWM_MES	1646
4.35.4	Coordination of CLU_PSN_PWM	1646
4.36	Clutch switch (Appl. Inc.)	1648
4.37	Clutch signal	1649
4.38	Oil sensor variables	1651
4.38.1	Engine oil temperature acquisition TOIL_MES	1651
4.38.2	Engine oil temperature coordination TOIL	1652
4.39	Oil sensor variables	1654
4.39.1	Activation Deactivation	1658
4.39.2	Disable current on oil level sensor	1659
4.39.3	Enable current on oil level sensor	1659
4.39.4	Initialization	1659